


Installation Instruction

180-degree maximum opening

STANDARD

5300/5500 Series Slide Track Door Closer

PULL SIDE

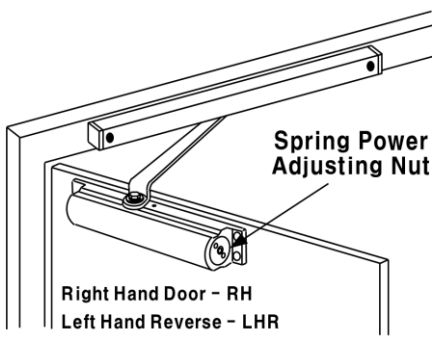


SPRING POWER ADJUSTMENT

C.W. : CLOCKWISE
C.C.W. : COUNTER CLOCKWISE


DOOR CLOSER SIZE	CLOCKWISE TURNS OF ADJUSTING NUT	APPLICABLE DOOR LEAF WIDTH		APPLICABLE DOOR WEIGHT
		INTERIOR	EXTERIOR (SWING OUT)	
1	5 Turns C.C.W.	32" (0.81m)	28" (0.71m)	33-66 LBS (15-30Kg)
2	3 Turns C.C.W.	36" (0.91m)	32" (0.81m)	66-99 LBS (30-45Kg)
3	PRESET	42" (1.07m)	36" (0.91m)	99-143 LBS (45-55Kg)
4	3 Turns C.W.	48" (1.22m)	42" (1.07m)	143-187 LBS (65-85Kg)
5	7 Turns C.W.	54" (1.37m)	48" (1.22m)	187-264 LBS (85-120Kg)
6	11 Turns C.W.	58" (1.47m)	54" (1.37m)	264-330 LBS (120-150Kg)

PULL SIDE

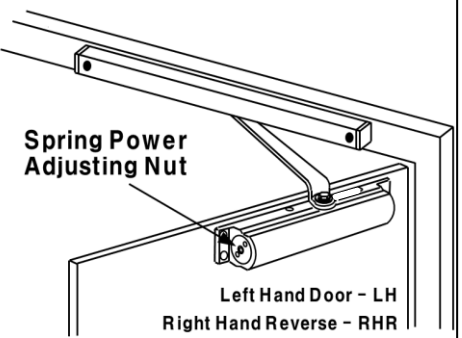


★ INSTALLATION INSTRUCTIONS

- Use diagram to locate holes on door and frame
 - 4 on door for body
 - 2 on frame for track assembly.

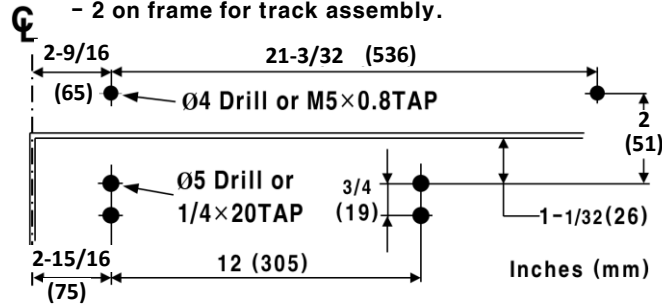


★ INSTALLATION INSTRUCTIONS


- Use diagram to locate holes on door and frame
 - 4 on door for body
 - 2 on frame for track assembly.

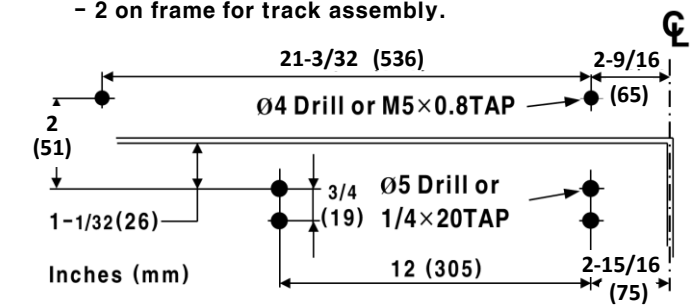


- Hold-Open: Slide, Bumper, Stopper, Side cap in to the track.
 - Non Hold-Open: Slide, Side cap in to the track.

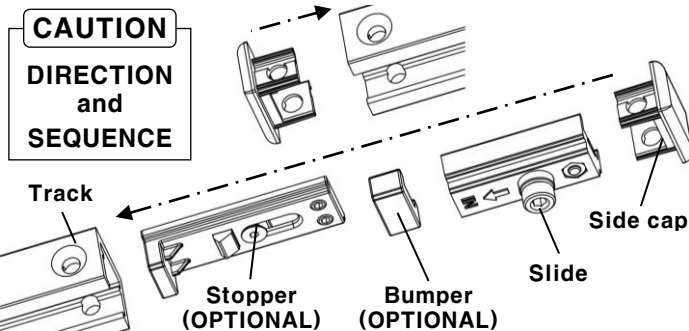


- Hold-Open: Slide, Bumper, Stopper, Side cap in to the track.
 - Non Hold-Open: Slide, Side cap in to the track.

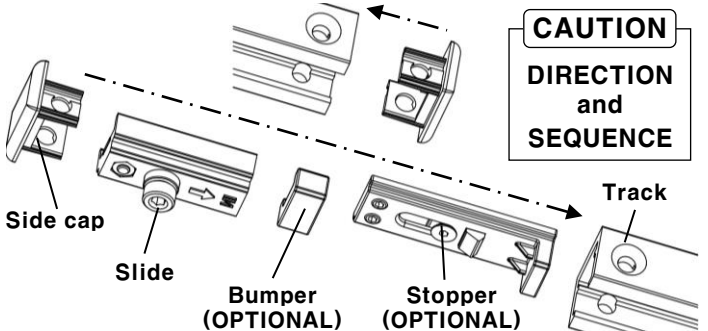


- Install the track assembly to the frame. Install the body to the door.

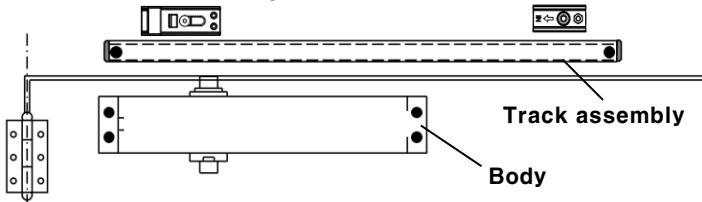


- Install the track assembly to the frame. Install the body to the door.

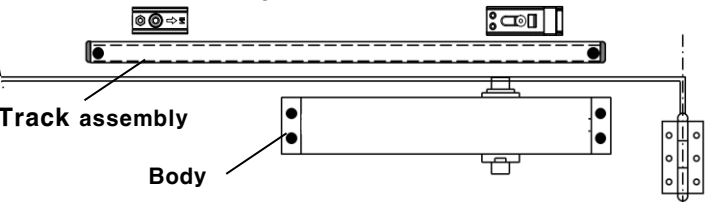

- Install main arm to pinion shaft, see Figure 1.
 - Set the main arm and the slider, see Figure 2.

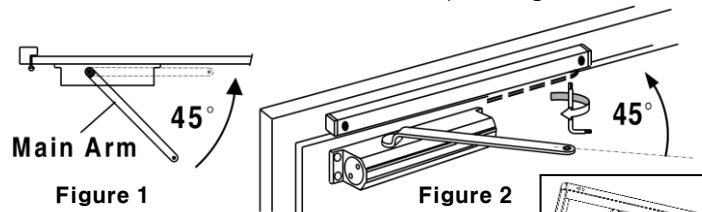

- Install main arm to pinion shaft, see Figure 1.
 - Set the main arm and the slider, see Figure 2.

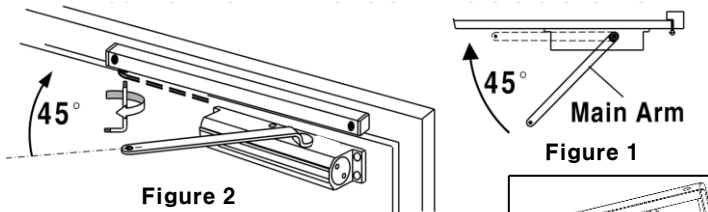


- Adjust Hold-Open angle and speed, power.
 - Install cover to the body

- Adjust Hold-Open angle and speed, power.
 - Install cover to the body


CLOSER ADJUSTMENT

Optional DELAYED ACTION

 
SPRING POWER ADJUSTING NUT



Closing cycle

 

Opening cycle

 


Installation Instruction

TOP JAMB

5300/5500 Series Slide Track Door Closer

120-degree maximum opening

PUSH SIDE

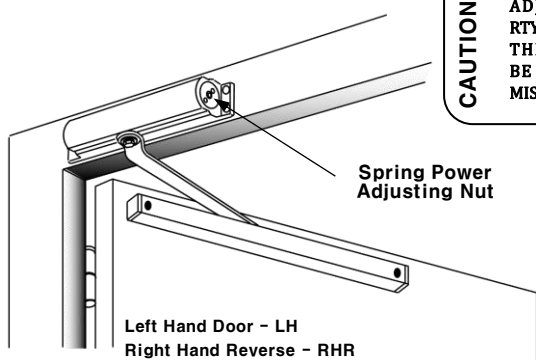


CAUTION

AN INCORRECTLY INSTALLED OR IMPROPERLY ADJUSTED DOOR CLOSER CAN CAUSE PROPERTY DAMAGE OR PERSONAL INJURY. THESE INSTALLATION INSTRUCTIONS SHOULD BE FOLLOWED TO AVOID THE POSSIBILITY OF MISAPPLICATION OR MISADJUSTMENT.


CAUTION

PUSH SIDE

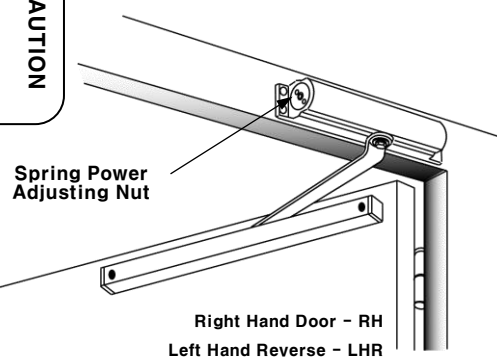


★ INSTALLATION INSTRUCTIONS

- 1 • Use diagram to locate holes on door and frame
- 4 on frame for body
- 2 on door for track assembly.

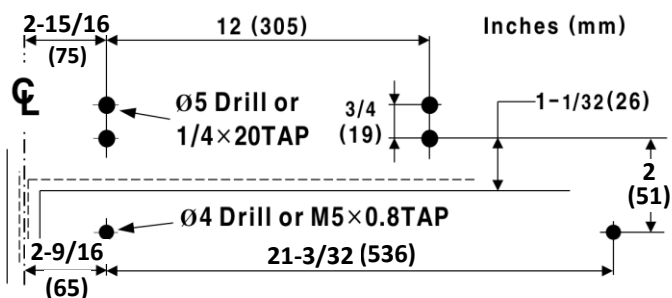


★ INSTALLATION INSTRUCTIONS


- 1 • Use diagram to locate holes on door and frame
- 4 on frame for body
- 2 on door for track assembly.

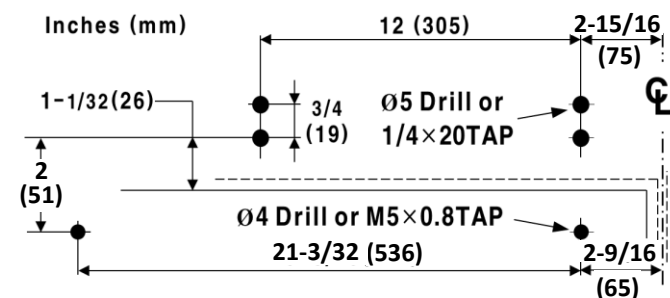


- 2 • Hold-Open: Slide, Bumper, Stopper, Side cap in to the track.
• Non Hold-Open: Slide, Side cap in to the track.

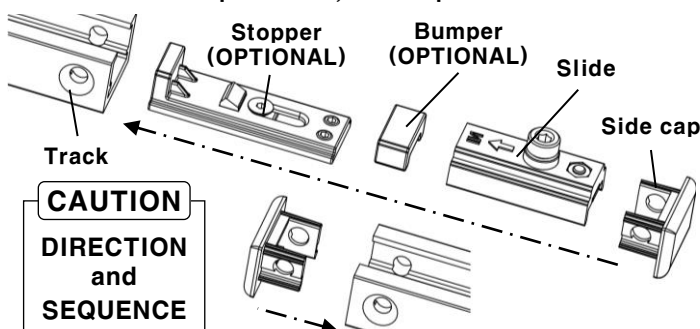


- 2 • Hold-Open: Slide, Bumper, Stopper, Side cap in to the track.
• Non Hold-Open: Slide, Side cap in to the track.

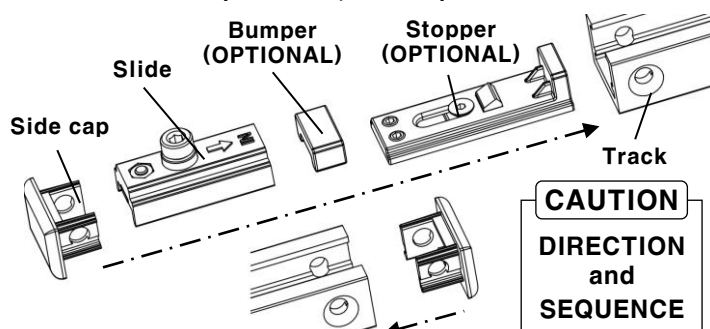


- 3 • Install the body to the frame.
Install the track assembly to the door.

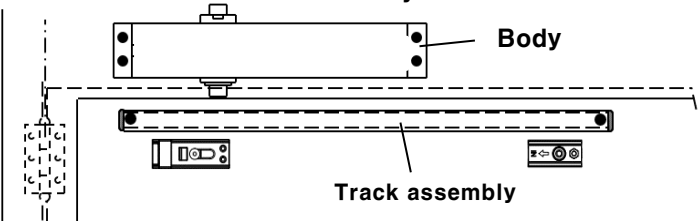


- 3 • Install the body to the frame.
Install the track assembly to the door.

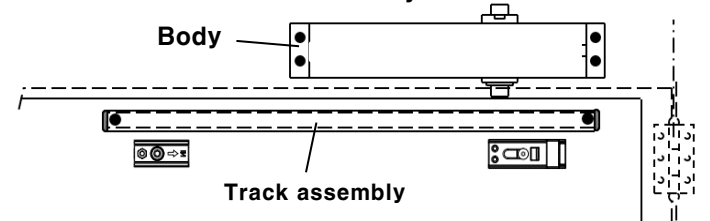

- 4 • Install main arm to pinion shaft, see Figure 1.
• Set the main arm and the slider, see Figure 2.

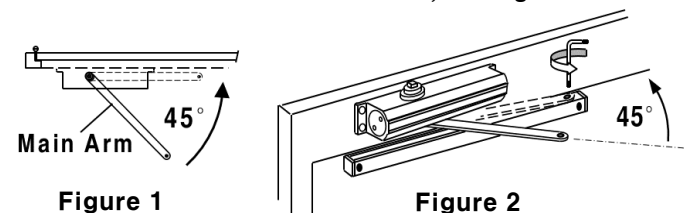


- 4 • Install main arm to pinion shaft, see Figure 1.
• Set the main arm and the slider, see Figure 2.

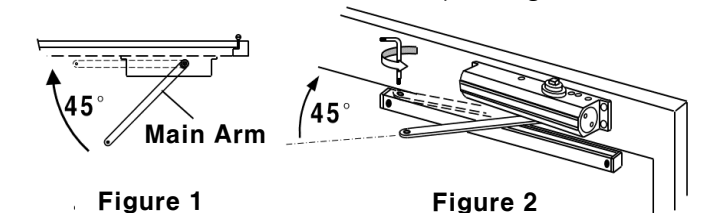

- 5 • Adjust Hold-Open angle and speed, power.
• Install cover to the body

 * See back page for closer adjustment.



- 5 • Adjust Hold-Open angle and speed, power.
• Install cover to the body

* See back page for closer adjustment.

