
5300/5500 DOOR CLOSER INSTRUCTION SHEET REGULAR ARM INSTALLATION - PULL SIDE - NON-HOLD OPEN AND HOLD OPEN APPLICATIONS

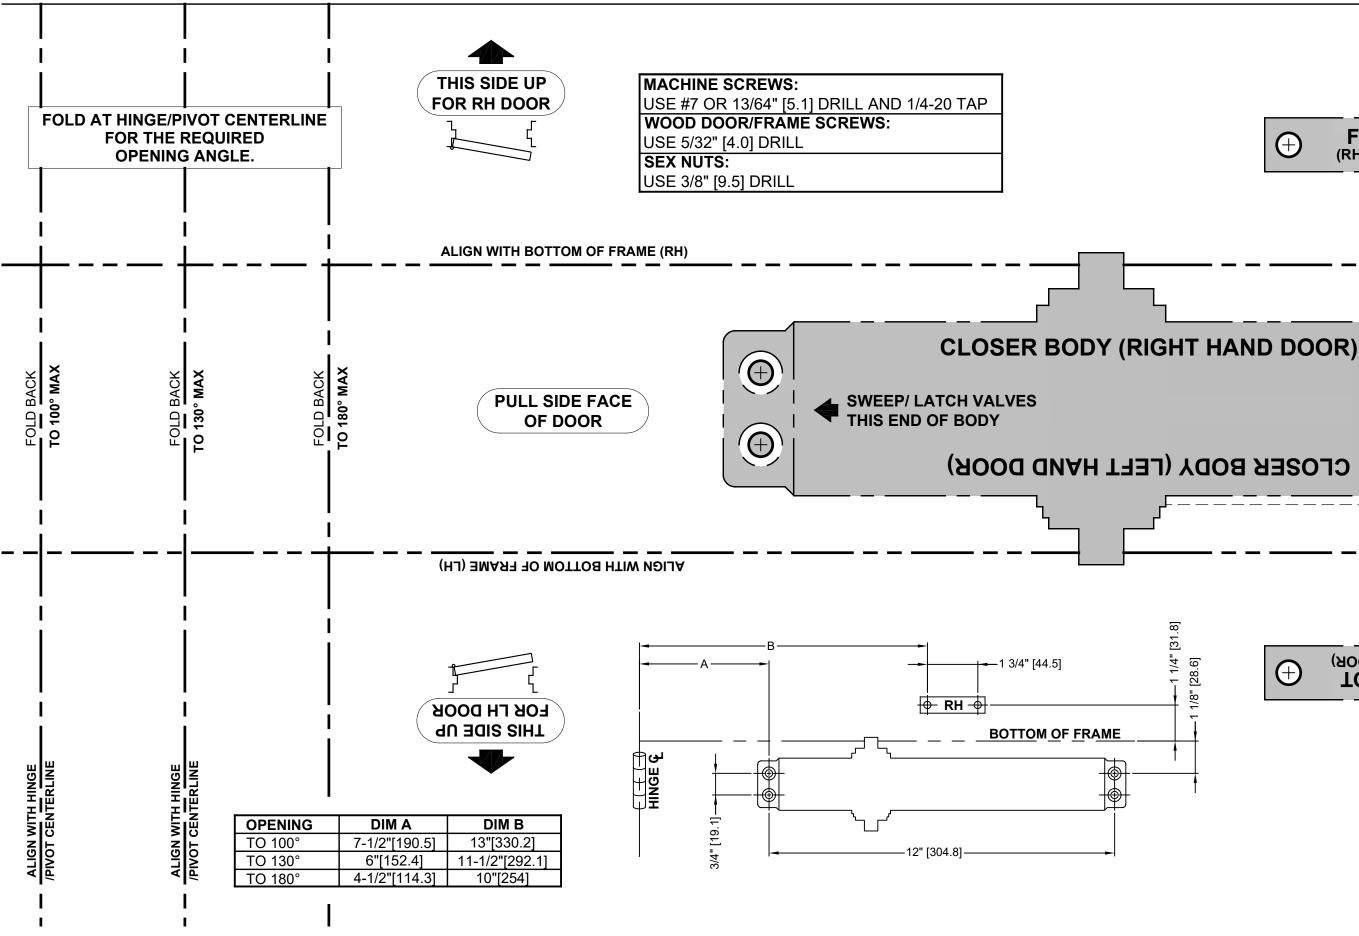

INSTRUCTION: 539351 REV. 3 09-05-19



FOLD HERE (RH)

[31.8]

1/4" [28.6]

"8/I

ЕОГД НЕВЕ (LH)





PDQ Manufacturing 2230 Embassy Dr. Lancaster, PA 17603 833-273-7832 833-2 PDQTECH www.pdqlocks.com

5300/5500 DOOR CLOSER INSTRUCTION SHEET **REGULAR ARM INSTALLATION - PULL SIDE - NON-HOLD OPEN AND HOLD OPEN APPLICATIONS**



- Confirm this sheet is correct for your product and application.
- 2. Read the complete instruction sheet before starting installation. 3. Incorrectly installed or adjusted door closers can cause
- personal injury or property damage.
- 4. To ensure safe operation closers should be examined and serviced, regularly.


See reverse side of this sheet to machine door & frame.

 
- Dimensions based on 4-1/2" x 4-1/2" full mortise butt hinges 2. with 5/8" stop and 1/8" door gap.
- 3. Confirm door & frame are properly reinforced.
- 4. Sex nuts required for un-reinforced or composite fire doors.
- 5. Do not install closer on the exterior (weather) side of building.



TOOLS REQUIRED:


- Power drill
- 2. 10mm box/combo wrench
- 3. Phillips screw driver
- 4. #7 or 13/64" drill bit and 1/4-20 tap (machine screws)
- 5. Tap handle
- 6. 5/32" drill bit (wood screws)
- 7. 3/8" drill bit (sex nuts)
- 8. Center punch

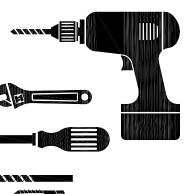




PREPARE DOOR AND FRAME:

 
- 1. Determine maximum opening angle.
- 2. Determine door hand (LH or RH).




- 3. Align & attach full size template (see reverse side).
- 4. Mark door & frame with center punch.
- 5. Remove template before machining door & frame.

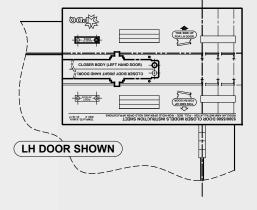


- **INSTALL CLOSER AND ARM:** 1. Attach closer body to door.
- Sweep and latch valves point toward hinge.
- 2. Attach foot to frame.

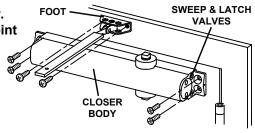

- 3. Secure main arm to closer spindle 90° to door/frame.
- 4. Connect adjustment arm with foot assembly: Rotate main arm until adjustment arm is 90° to door & frame. Tighten arm screw or bolt .

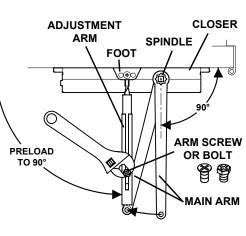

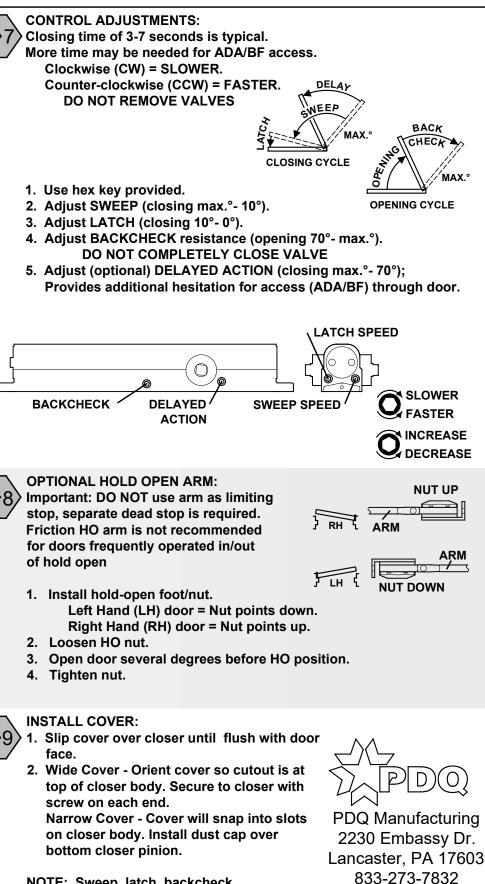

ADJUST SPRING POWER:

SIZE

BF

1

2

3

4

5

INTERIOR

5 LBF ON 36"

32" [812.8]

36" [914.4]

42" [1066.8]

48" [1219.2]

54" [1371.6]

58" [1473.2]

 $\langle 6 \rangle$ 1. Use 4 mm hex key provided to adjust to size on chart. Clockwise (CW) turns increase spring power (+). Counter-clockwise (CCW) turns decrease spring power (-).


5300/5500 Series closers can be adjusted to meet

36" [914.4] 42" [1066.8]

48" [1219.2]

54" [1371.6]

ADA Barrier Free (BF) applications. Compliance with ADA/BF requirements may result with door not fully closing and latching. Check with local AHJ. Closer size may vary due to site conditions.

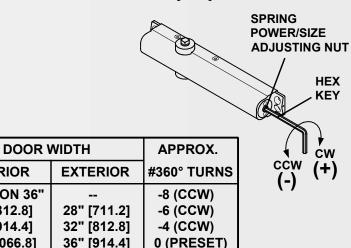

+5 (CW)

+9 (CW)

+12 (CW)

- - NOTE: Sweep, latch, backcheck,

INSTRUCTION: 539351 REV. 3 09-05-19

and optional delayed action valves are all accessible after cover installation.

833-2 PDQTECH www.pdglocks.com