

5300/5500 DOOR CLOSER INSTRUCTION SHEET

PARALLEL ARM INSTALLATION - PUSH SIDE - DS (NHO) AND DSHO (HO) APPLICATIONS - 105° MAX



- Confirm this sheet is correct for your product and application.
- 2. Read the complete instruction sheet before starting installation.
- 3. Incorrectly installed or adjusted door closers can cause personal injury or property damage.
- 4. To ensure safe operation closers should be examined and serviced, regularly.




- See reverse side of this sheet to machine door & frame.
- Dimensions based on 4-1/2" x 4-1/2" full mortise butt hinges with 5/8" stop and 1/8" door gap.
- 3. Confirm door & frame are properly reinforced.
- 4. Sex nuts required for un-reinforced or composite fire doors.
- 5. Do not install closer on the exterior (weather) side of building.



TOOLS REQUIRED:


- Power drill
- 10mm box/combo wrench
- 3. Phillips screw driver
- 4. #7 or 13/64" drill bit and 1/4-20 tap (machine screws)
- 5. Tap handle
- 6. 5/32" drill bit (wood screws)
- 7. 3/8" drill bit (sex nuts)
- 8. Center punch

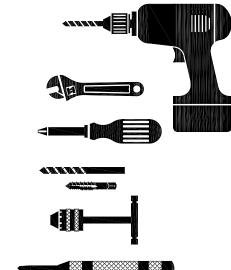




PREPARE DOOR AND FRAME:

- 1. Determine maximum opening angle.
- 2. Determine door hand (LH or RH).

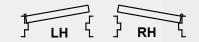


- 3. Align & attach full size template (see reverse side).
- 4. Mark door & frame with center punch.
- 5. Remove template before machining door & frame.

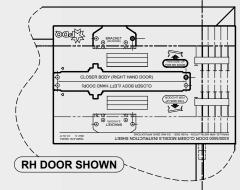





- INSTALL CLOSER AND ARM:

 1. Attach closer body to door. Sweep & latch valves point away from hinges.
 - 2. Install bumper stop into DS bracket. Bracket is stamped:
 - "L"(left hand) and "R"(right hand).
 - 3. Insert filler plug into other hole.
 - 4. Install DS bracket and spacer block to frame.

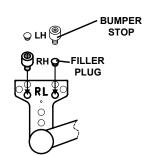

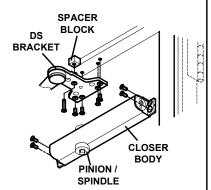

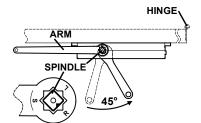


- 4. Close door & rotate closer spindle 45° toward hinge / pivot.
- 5. Install arm parallel to door face, pointing away from hinge.
- 6. Secure arm to closer spindle.



ADJUST SPRING POWER:

6 1. Use 4 mm hex key provided to adjust to size on chart. Clockwise (CW) turns increase spring power (+). Counter-clockwise (CCW) turns decrease spring power (-).

5300/5500 Series closers can be adjusted to meet ADA Barrier Free (BF) applications. Compliance with ADA/BF requirements may result with door not fully closing and latching. Check with local AHJ. Closer size may vary due to site conditions.

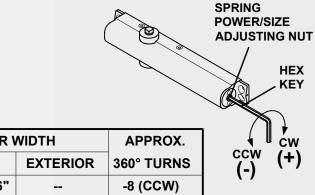

	DOOR WIDTH		APPROX.
SIZE	INTERIOR	EXTERIOR	360° TURNS
BF	5 LBF ON 36"		-8 (CCW)
1	28" [711.2]	N/A	-6 (CCW)
2	32" [812.8]	28" [711.2]	-4 (CCW)
3	36" [914.4]	32" [812.8]	0 (PRESET)
4	42" [1066.8]	36" [914.4]	+5 (CW)
5	48" [1219.2]	42" [1066.8]	+9 (CW)
6	54" [1371.6]	48" [1219.2]	+12 (CW)




Closing time of 3-7 seconds is typical.

More time may be needed for ADA/BF access.

Clockwise (CW) = SLOWER.

Counter-clockwise (CCW) = FASTER. **DO NOT REMOVE VALVES**

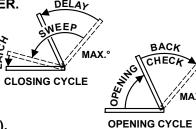


INSTRUCTION: 539354

09-05-19

REV. 4


- 1. Use hex key provided.
- 2. Adjust SWEEP (closing max.°- 10°).
- 3. Adjust LATCH (closing 10°-0°).
- 4. Adjust BACKCHECK resistance (opening 70°- max.°). DO NOT COMPLETELY CLOSE VALVE
- 5. Adjust (optional) DELAYED ACTION (closing max.°- 70°); Provides additional hesitation for access (ADA/BF) through door.

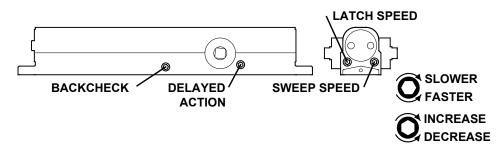



OPTIONAL HOLD OPEN:

- 1. DSHO arm has an optional thumb turn "T" handle.
- 2. A 1/4 rotation of "T" engages or disengages hold open.
- 3. Door can also be manually pulled in and out of hold open without rotating the "T" handle.
- 4. Greasing detent ball is recommended to prevent wear.

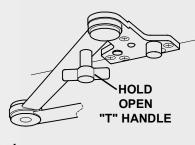



INSTALL COVER:

- 1. Slip cover over closer until flush with door
- 2. Wide Cover Orient cover so cutout is at top of closer body. Secure to closer with screw on each end. Narrow Cover - Cover will snap into slots on closer body. Install dust cap over bottom closer pinion.

NOTE: Sweep, latch, backcheck, and optional delayed action valves are all accessible after cover installation.



PDQ Manufacturing 2230 Embassy Dr. Lancaster, PA 17603 833-273-7832 833-2 PDQTECH www.pdglocks.com