
#### SDS INSTALLATION INSTRUCTION CYLINDRICAL LOCK



Phone: 866-874-3662 | www.pdqlocks.com

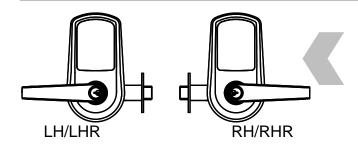



#### 1. CHECK HANDING OF LOCK


 If handing of lock is not correct for opening, see next page for handing instructions.

### 2. PREPARE DOOR & INSTALL LATCH

- Prepare door using the provided template.
- Install latch with the rounded edge facing the door frame
- Secure the latch using two combo screws.

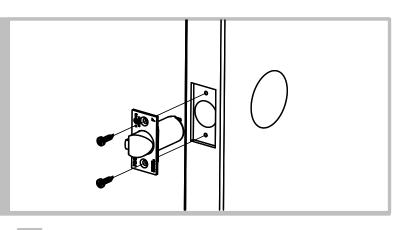

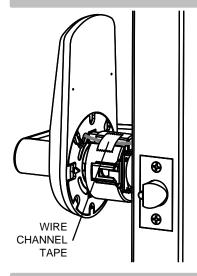

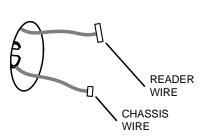


### 3. INSTALL OUTSIDE TRIM / CHASSIS ASSEMBLY

- Place the exterior side of the lock (the side with the keyhole) through the latch opening.
- Carefully run wires through the opening as well.

# 4. INSTALL INSIDE MOUNTING PLATE

 Install inside mounting plate and secure with provided Philips head screws.

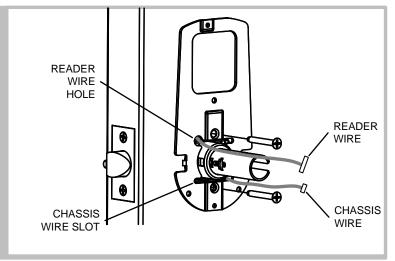

#### SDS INSTALLATION INSTRUCTION


CYLINDRICAL LOCK




 
Phone: 866-874-3662 | www.pdglocks.com

# 5. CONNECT READER AND INSTALL INSIDE TRIM

- Unscrew battery cover and place to the side.
- Plug reader wire and chassis wire into sockets on control board. Be careful not to pinch wires.
- Secure inside trim with provided short pan head screws.
- Install batteries and battery cover with long pan head screw.
- Install lever ring and inside lever push until lever retaining clip clicks into place.

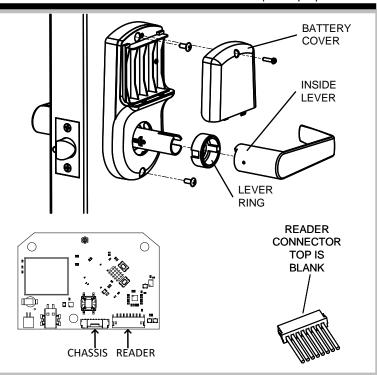

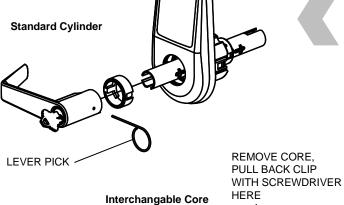



key is inserted and turned 45 degrees.

Interchangable Core – Remove core from outside lever with Control Key, Using small screwdriver or awl, pull back lever clip from inside as shown.

2. Remove tape holding wire to chassis.

HANDING INSTRUCTIONS

- 3. Pull chassis out of escutcheon and rotate chassis 1/2 turn (180°) maximum.
- 4. Replace chassis and attach tape.
- Re-install lever -Standard: Rotate key while installing / IC: Insert Core

**CHASSIS** 

Scan QR Code to download Spirit App.



