


Removal of IC Levers from the lockset assembly

1. With core removed from the lever, locate the spring-loaded lever detent inside the opening of the lever.

Lever Detent

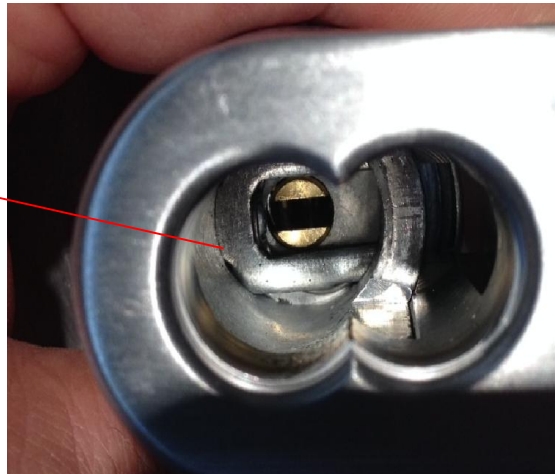

2. Insert a small flat tip screw driver into the IC opening in the lever



3. Insert the tip of the screw driver between the spring-loaded detent and the inner wall of the

**Insert
screwdriver tip
here**

