
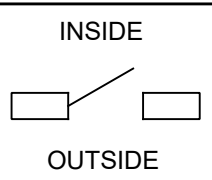


# HANDING GUIDE FOR PDQ's MR 115 AND 141 FUNCTION



**DO NOT OPEN THE LOCK BODY.** ALL HANDING CHANGES ARE MADE BY POSITIONING THE SUPPLIED SCREWS AND PARTS WHICH ARE ACCESSED THROUGH THE EXTERIOR OF THE LOCK BODY.

NO ADDITIONAL PARTS ARE REQUIRED TO CHANGE THE HAND OF THIS LOCK BODY.



**IF YOU ARE REVERSING THE SWING (LH TO LHR FOR EXAMPLE) ALL YOU NEED TO DO IS REVERSE THE LATCH BOLT HEAD.**

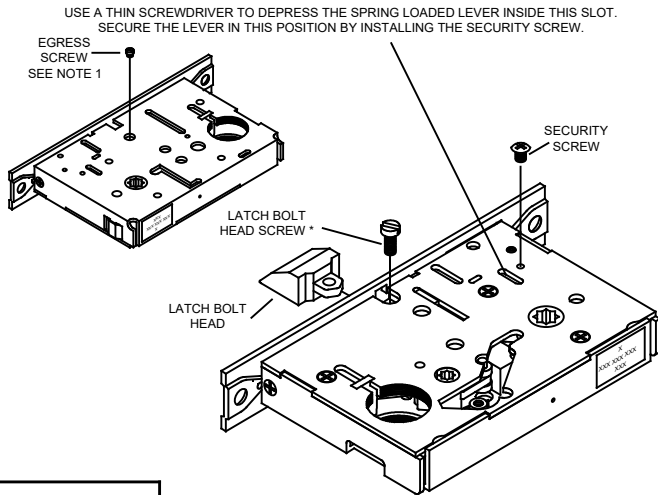



LEFT HAND (LH)

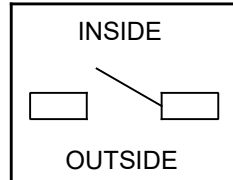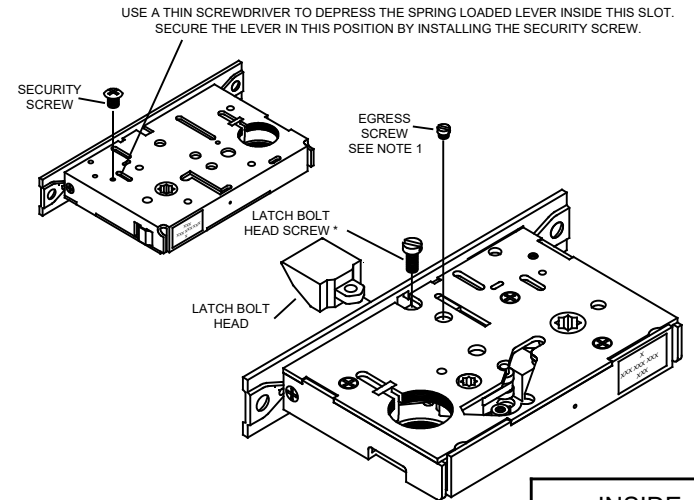

RIGHT HAND (RH)

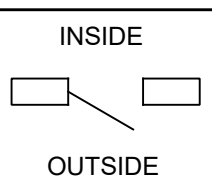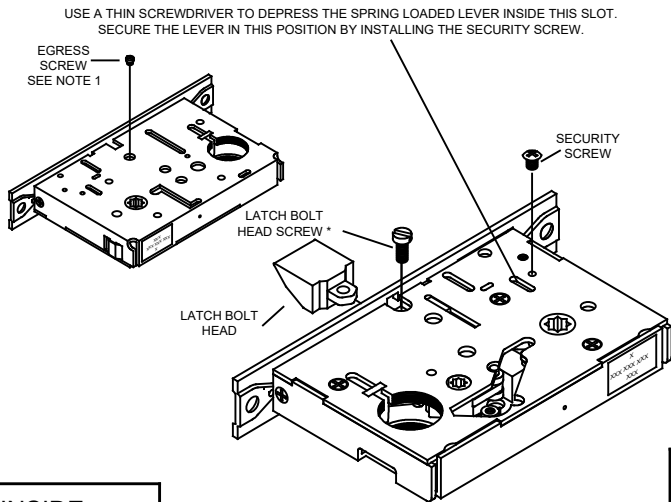

LEFT HAND REVERSE (LHR)

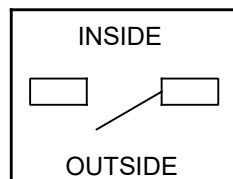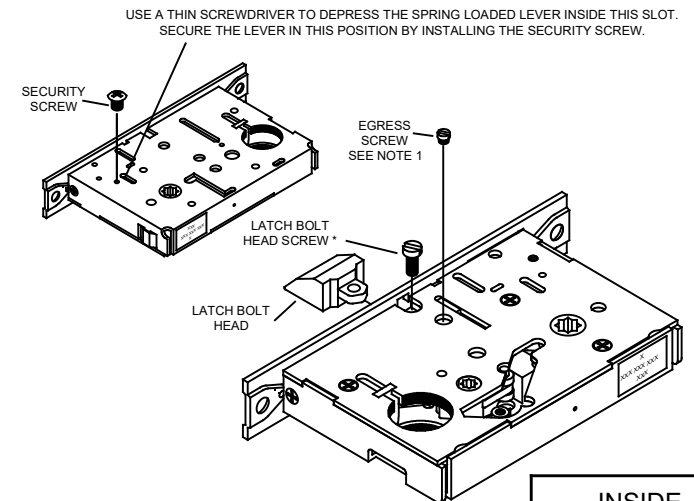

RIGHT HAND REVERSE (RHR)

**NOTES:**

1 - EGRESS SCREW ONLY APPLYS TO 115 FUNCTION.

\* - APPLY PERMATEx'S LOCTITE 242 (BLUE), OR EQUIVALENT, TO THE LATCH BOLT HEAD SCREW.