
# SPRING CUSHION TEMPLATE: 999301, REV. 1 08-07-12

# INSTALLATION INSTRUCTION


TOOLS REQUIRED FOR INSTALLATION
#3 PHILLIPS SCREWDRIVER
4MM ALLEN WRENCH (PROVIDED)

|    | PARTS LIST               | QTY |
|----|--------------------------|-----|
| 1. | SPRING CUSHION ASSEMBLY  | [1] |
| 2. | LIMITING STOP            | [1] |
| 3. | 100° SCREW               | [1] |
| 4. | DS OR DSHO ARM & BRACKET |     |
| 5. | SCREW (PART OF ARM KIT)  |     |

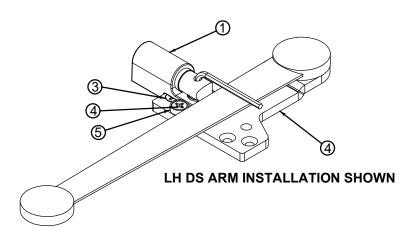

# **INSTALLATION DIAGRAM**

#### **INSTALL BY NUMBERS**

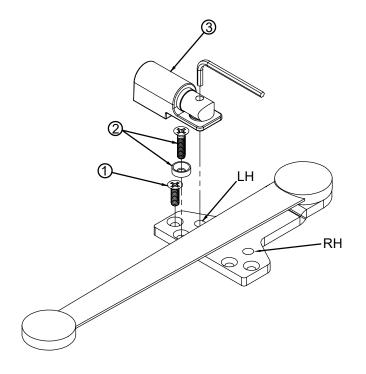

## **INSTRUCTIONS:**

- 1. BASED ON HANDING, REMOVE AND DISCARD SCREW. REPLACE WITH 100° SCREW IN SCREW PACK.
- 2. REMOVE THE PARALLEL ARM BRACKET MOUNTING SCREW AND INSTALL THE LIMITING STOP, HELD IN PLACE BY THE SCREW YOU JUST REMOVED.
- 3. USING 4MM ALLEN WRENCH PROVIDED IN THE SPRING CUSHION SCREW PACK, THREAD THE ASSEMBLY INTO THE APPROPRIATE THREADED HOLE IN THE DS OR DSHO ARM BRACKET.
- \* SPRING CUSHION MUST BE ABLE TO MOVE FREELY WHEN INSTALLED.



PDQ Manufacturing 2230 Embassy Dr. Lancaster, PA 17603 833-273-7832 833-2 PDQTECH www.pdqlocks.com

## INSTALLATION