

ALL DOOR CLOSER MODELS INSTRUCTION


PARALLEL ARM INSTALLATION - EDA (NHO) AND EDA (HO) ARM

INSTRUCTION: 999355,
REV. 0 07-20-17

For EDA/EDAHO applications -
bumper noted on instruction sheet is deleted.

Install filler plugs into threaded holes.

All other details are the same as DS/DSHO arm.

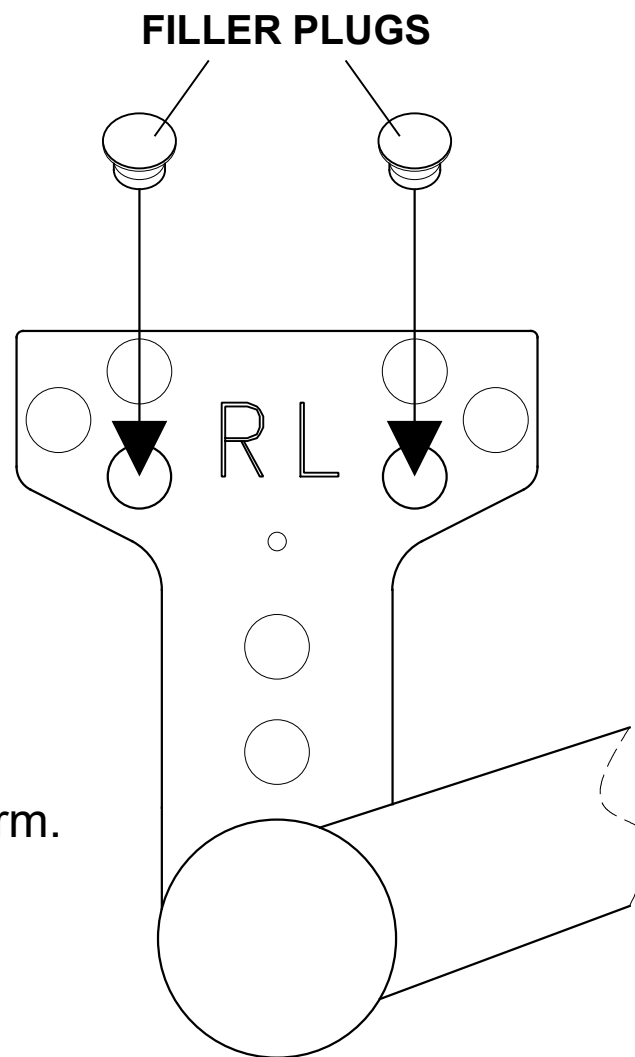

PDQ Manufacturing
2230 Embassy Dr.
Lancaster, PA 17603
833-273-7832
833-2 PDQTECH
www.pdqlocks.com

FOR TECHNICAL SUPPORT CONTACT PDQ @ 1-800-441-9692