


THIS SIDE OF TEMPLATE FOR INSIDE OF RH/RHR DOORS

PB-9701 REV0



PDQ Manufacturing
 2230 Embassy Dr.
 Lancaster, PA 17603
 833-273-7832
 Fax: 717-656-6892
 www.pdqlocks.com

Installation Template for Passivebolt GTS Cylindrical Lever Locksets

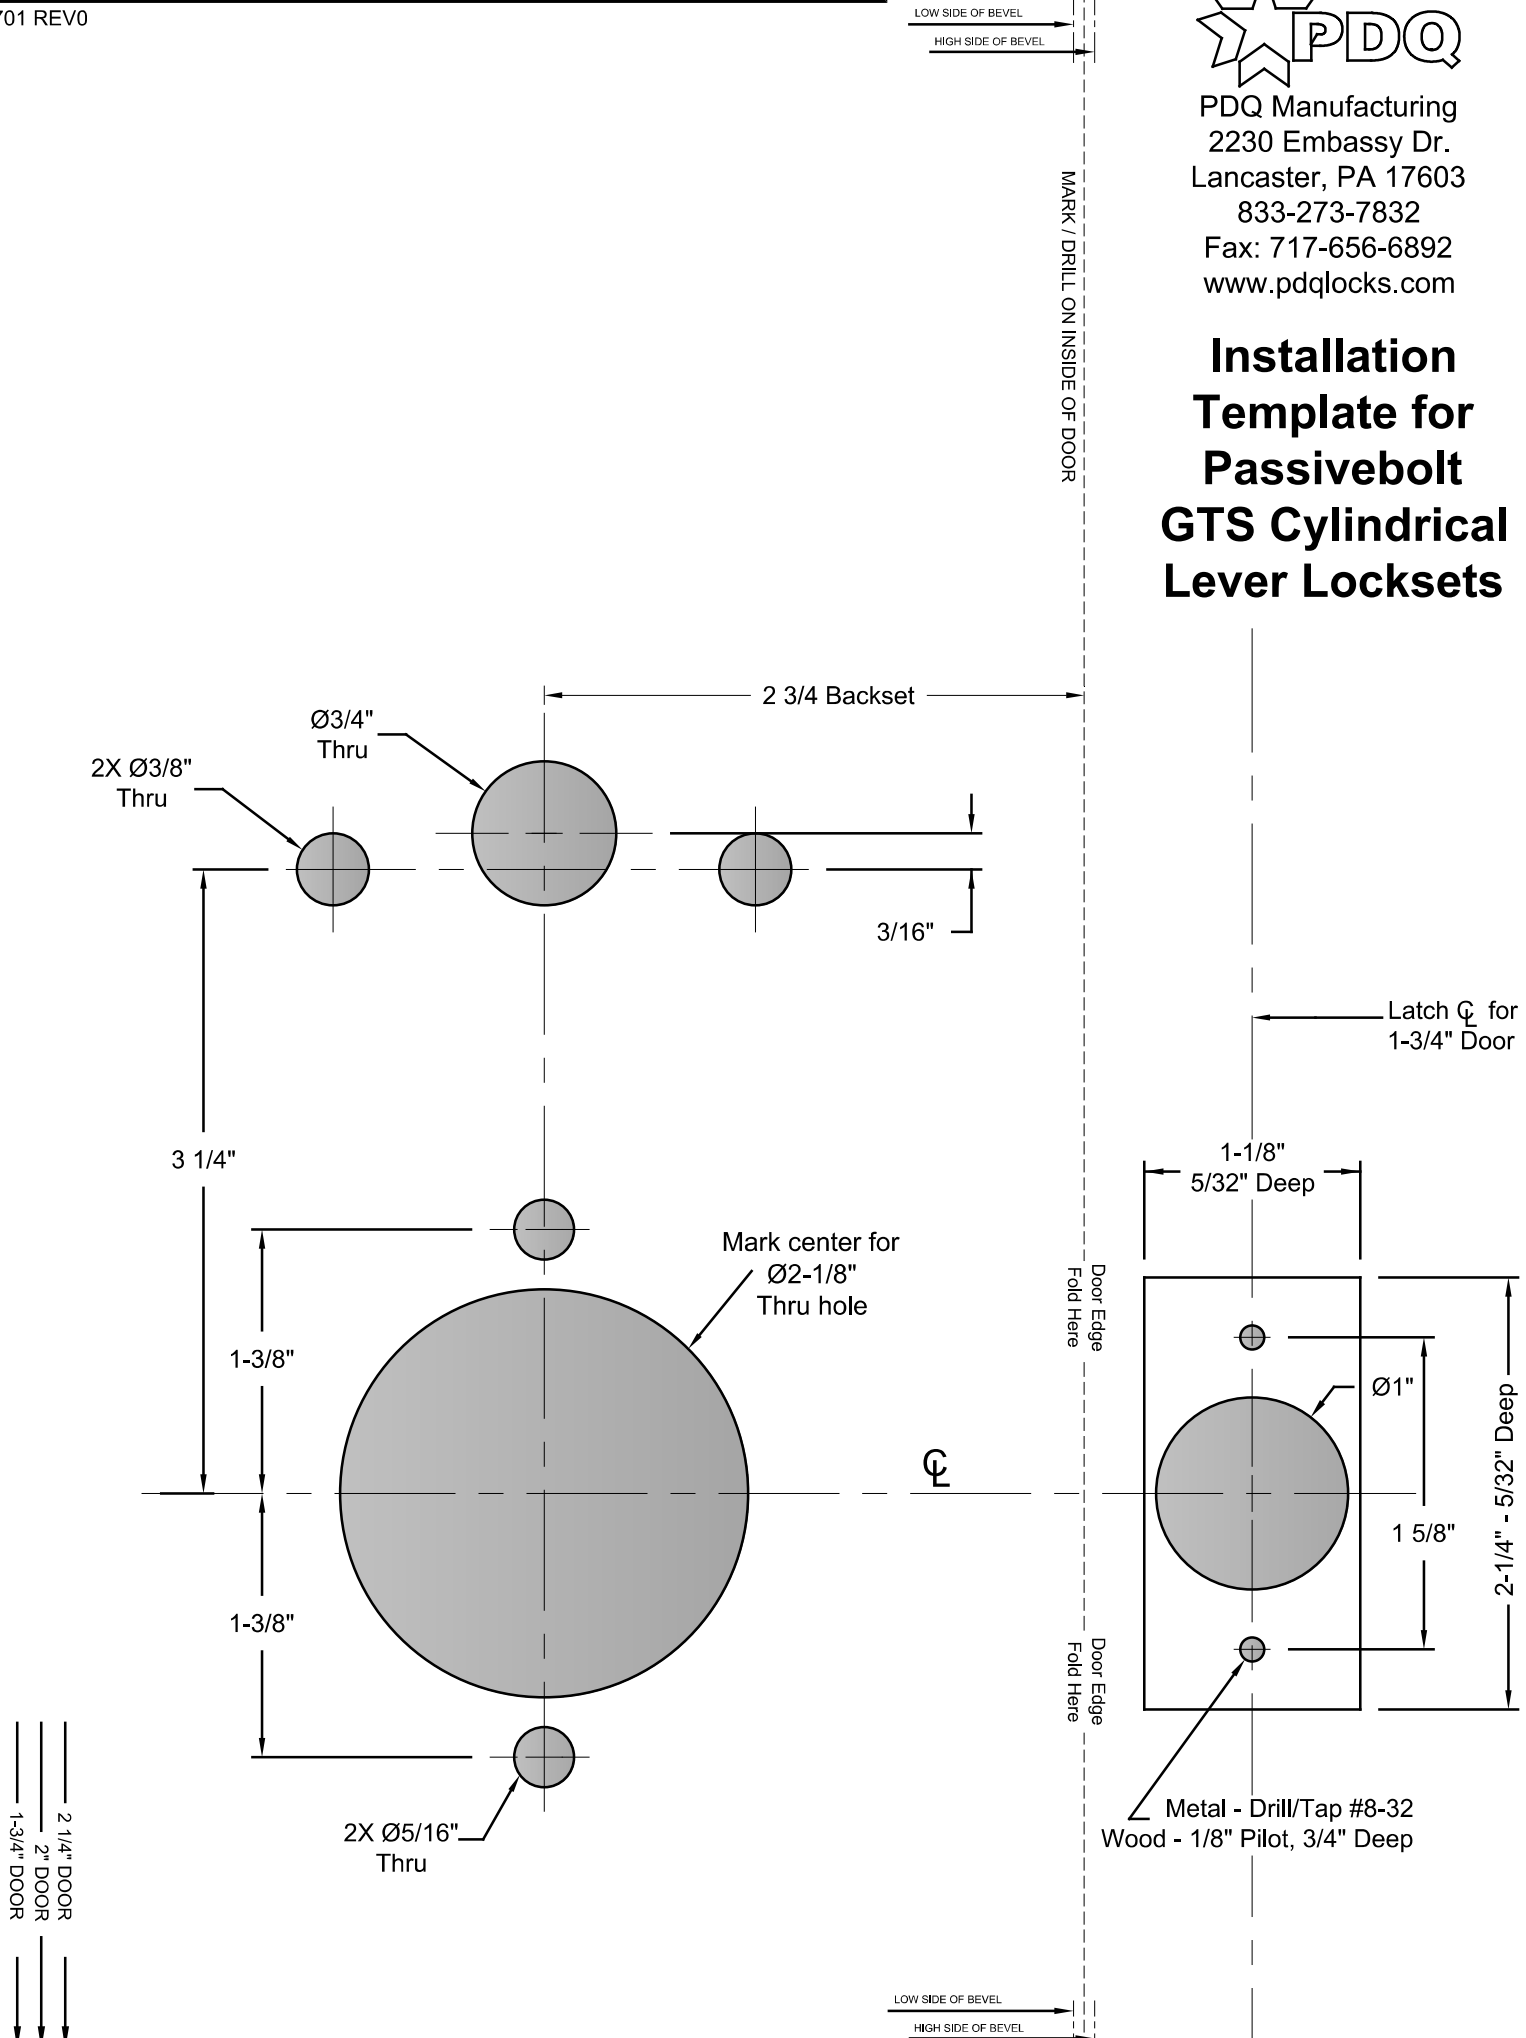



PDQ Manufacturing
 2230 Embassy Dr.
 Lancaster, PA 17603
 833-273-7832
 Fax: 717-656-6892
 www.pdqlocks.com


Installation Template for Passivebolt GTS Cylindrical Lever Locksets

THIS SIDE OF TEMPLATE FOR INSIDE OF LH/LHR DOORS

PB-9701 REV0

LOW SIDE OF BEVEL
 HIGH SIDE OF BEVEL

MARK / DRILL ON INSIDE OF DOOR

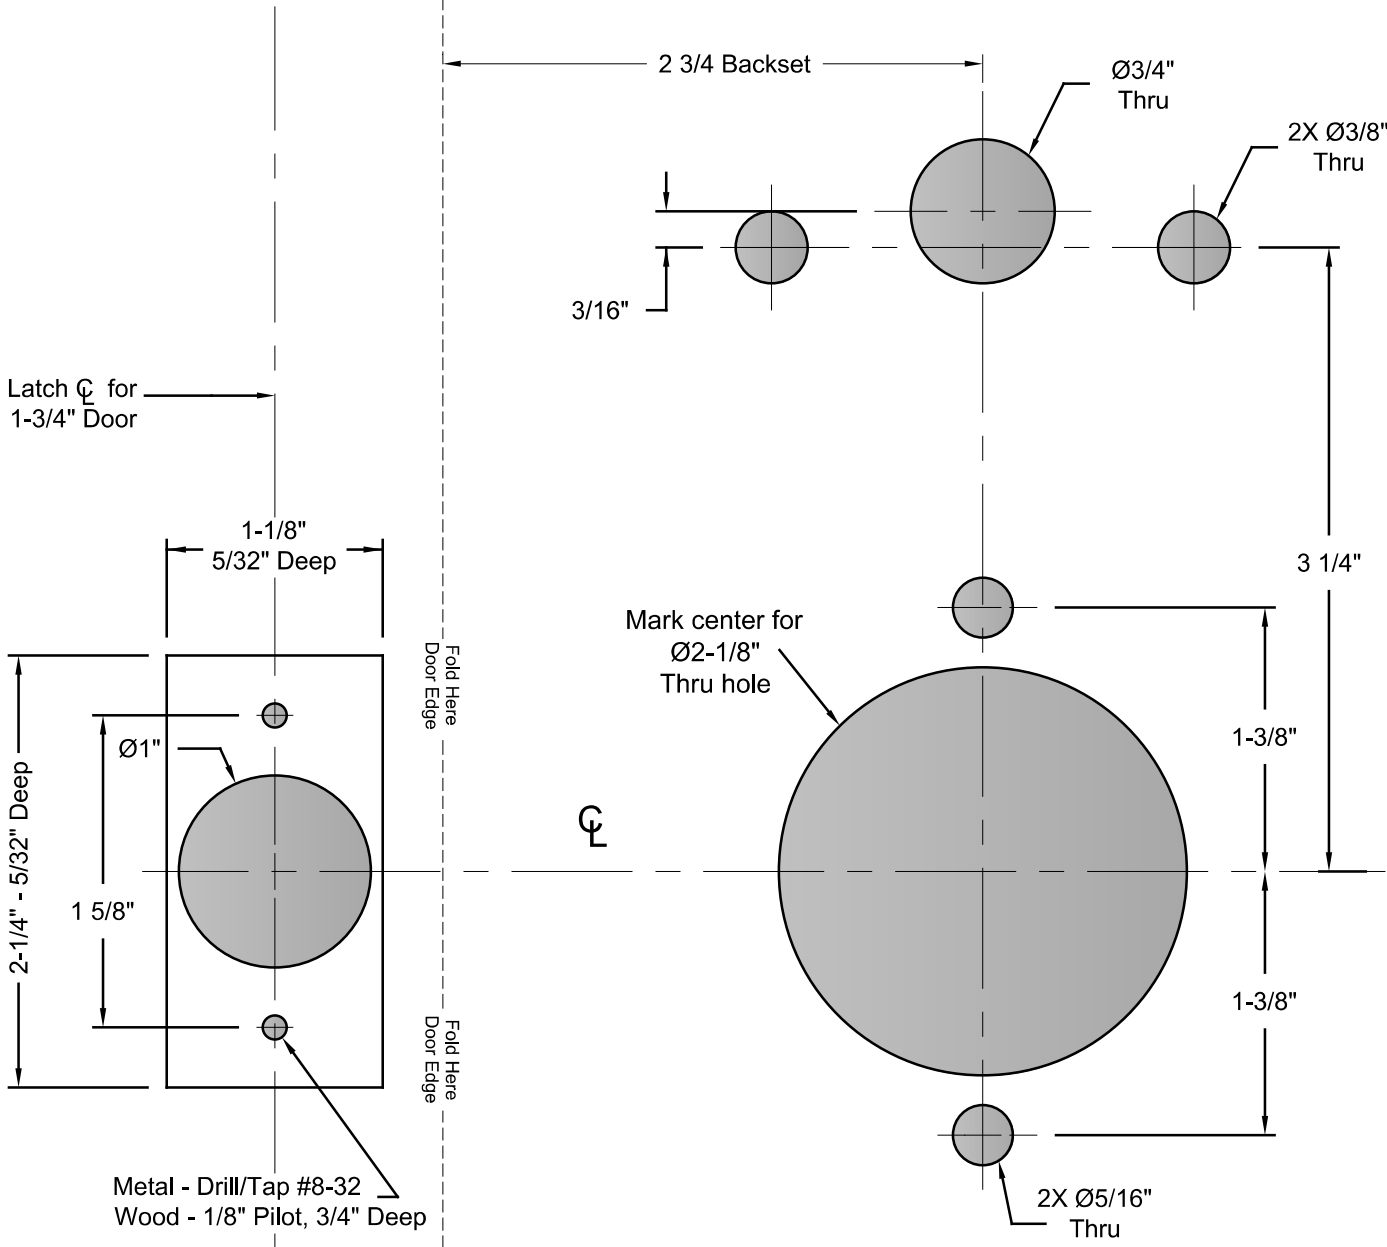

Metal - Drill/Tap #8-32
 Wood - 1/8" Pilot, 3/4" Deep

LOW SIDE OF BEVEL
 HIGH SIDE OF BEVEL

1-3/4" DOOR
 2" DOOR
 2 1/4" DOOR