

MRS INSTALLATION INSTRUCTIONS


PASSIVEBOLT POWERED MORTISE LOCK



For Mechanical Concerns:
Phone: 866-874-3662
www.pdqlocks.com

PassiveBolt

For Electrical Concerns:
Email: support@passivebolt.com
www.PassiveBolt.com


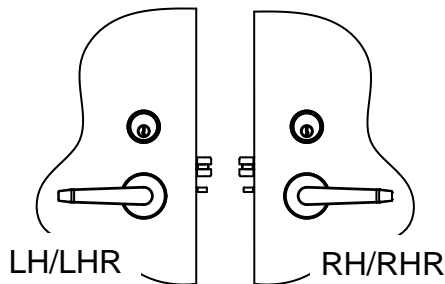


1. CHECK HANDING OF LOCK BODY

- If handing of lock body is not correct for opening, consult factory for handing instruction.

2. INSTALL CHASSIS, TRIM, TURNPIECE & CYLINDER

- Prepare door according to included template.
- Install mortise chassis while feeding chassis wire into hole on **inside** of door.
- Gently pull wire through hole as chassis is inserted.
- Install trim using included instruction.

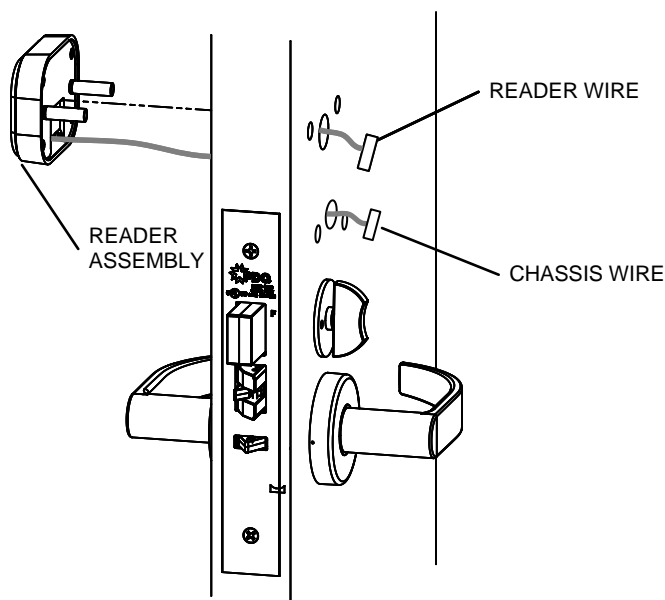
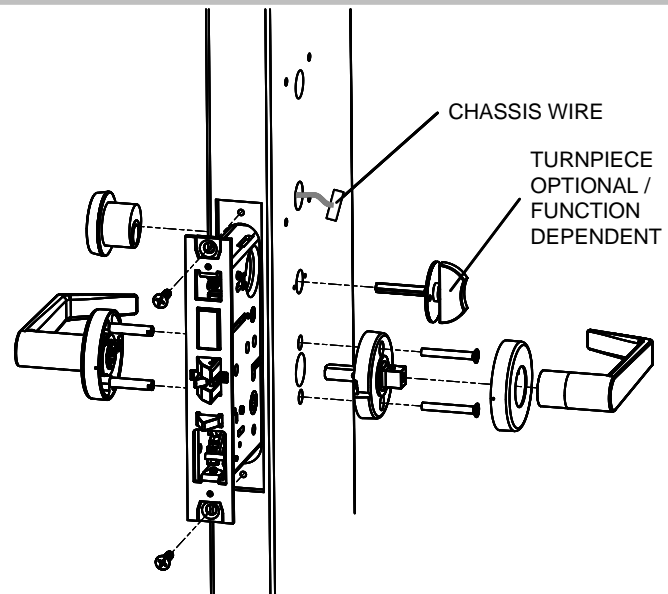


3. INSTALL READER ASSEMBLY

- Feed reader wire through door
- Do not pinch wire

4. INSTALL INSIDE MOUNTING PLATE ASSEMBLY

- Feed chassis and reader wires through mounting plate.
- Secure with (2) pan head wood/metal screws and (2) machine screws.
- Make wire connection after reader is secure. Push extra wire into door cavity.

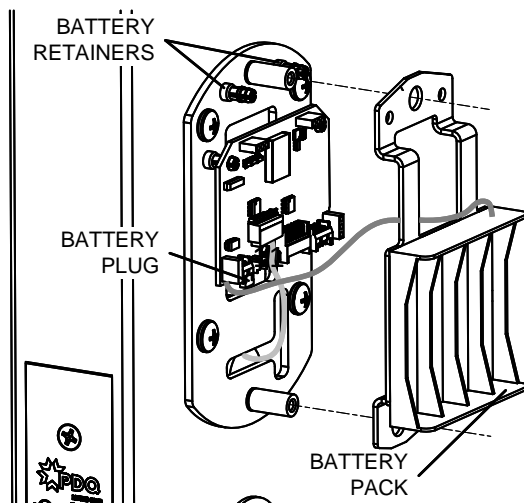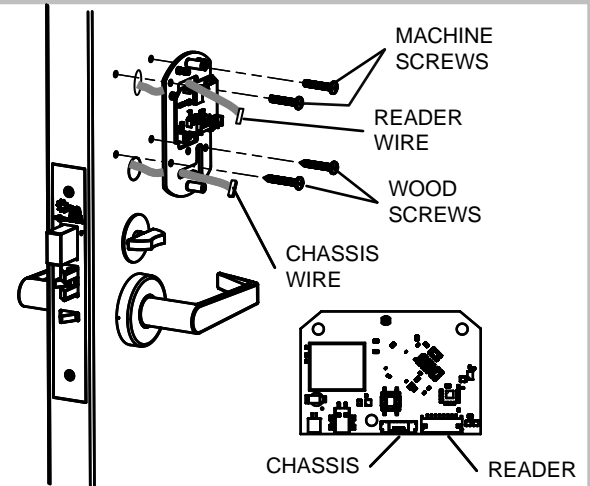

5. INSTALL BATTERY PACK

- Plug in battery wire to control board.
- Install battery pack over two studs on mounting plate.
- Snap battery pack onto retainers on mounting plate.

6. INSTALL BATTERIES AND BATTERY COVER

- Install batteries and battery cover with (2) black pan head screws.

