


CLS INSTALLATION INSTRUCTION

BLE ONLY INTERCONNECTED LOCK



For Mechanical Concerns:
Phone: 866-874-3662
www.pdqlocks.com

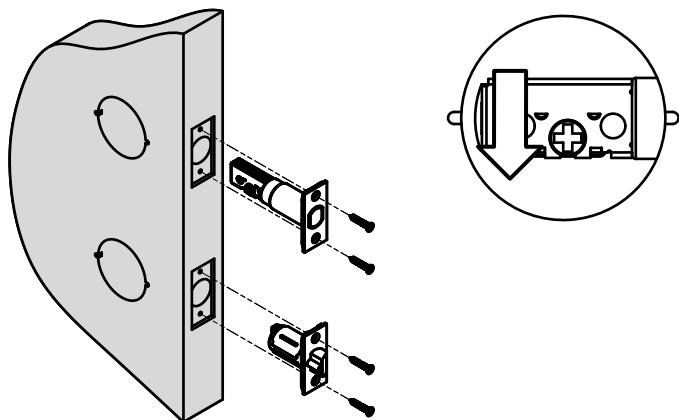


1. PREPARE DOOR & INSTALL LATCHES

- Prepare door according to template
- Install deadbolt latch in top hole with cross slot for tailpiece toward bottom
- Install beveled latch on bottom with bevel toward door frame
- Secure with (4) combo screws

2. INSTALL LOCK ASSEMBLY

- Install lock chassis into bottom hole making sure to properly engage lock body into latchbolt
- Install inside mounting plate and secure with (2) screws

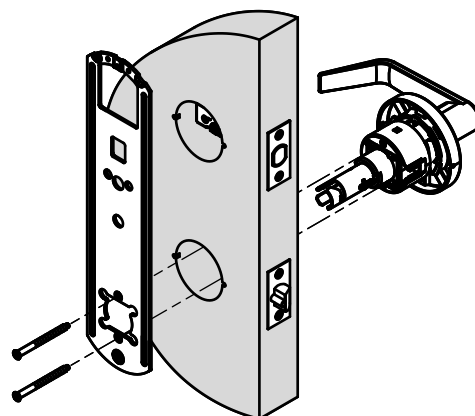


3. INSTALL CYLINDER ASSEMBLY

- Install cylinder assembly from outside of door
- If extended, retract deadbolt

Left Hand Door – Rotate tailpiece clockwise until it stops in the vertical orientation

Right Hand Door – Rotate tailpiece counter-clockwise until it stops in the vertical orientation

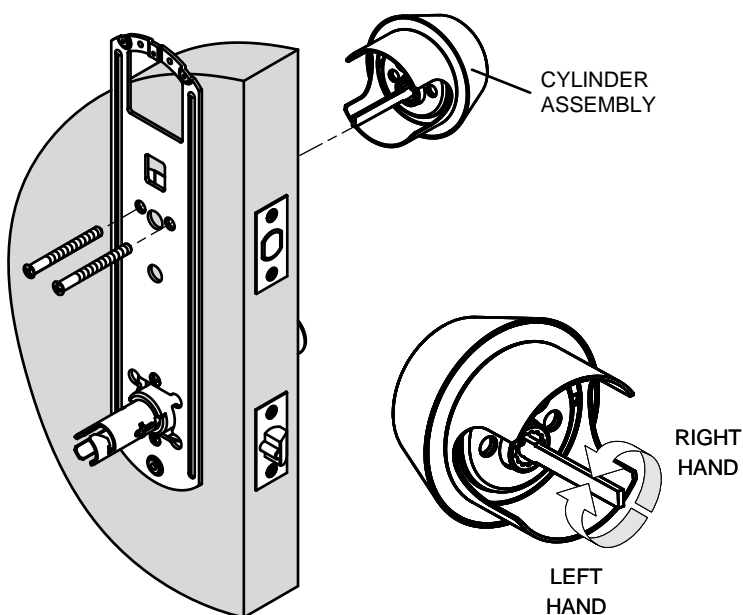


CLS INSTALLATION INSTRUCTION

BLE ONLY INTERCONNECTED LOCK




4. PREPARE INSIDE ESCUTCHEON

- Rotate lever driver tab to correct orientation as shown

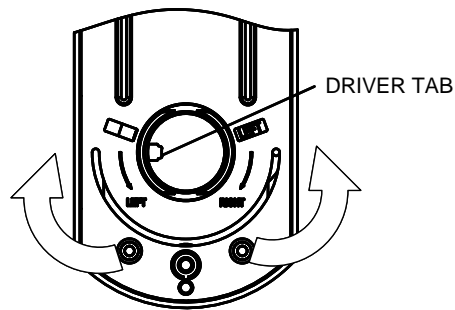

Rotate Driver Tab
For Proper
Handing

OUTSIDE TRIM

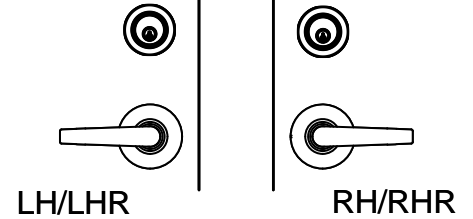

5. INSTALL INSIDE ESCUTCHEON AND LEVER

- Rotate thumb turn away from leading edge of door
- Install inside escutcheon
- Secure escutcheon using two screws
- Install lever
- Install batteries and battery cover

