


MRS INSTALLATION INSTRUCTION

MORTISE LOCK



Phone: 866-874-3662 | www.pdqlocks.com


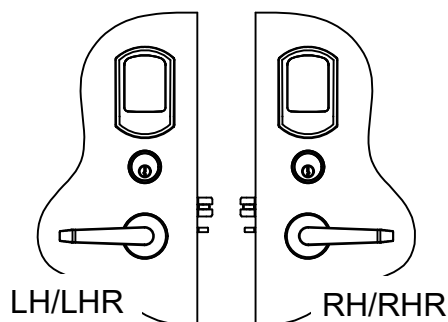


1. CHECK HANDING OF LOCK BODY

- If handing of lock body is not correct for opening, consult factory for handing instruction.

2. INSTALL CHASSIS, TRIM, TURNPIECE & CYLINDER

- Prepare door according to included template.
- Install mortise chassis while feeding chassis wire into hole on **inside** of door.
- Gently pull wire through hole as chassis is inserted.
- Install trim using included instruction.
- Tighten down set screw on **inside** of door.

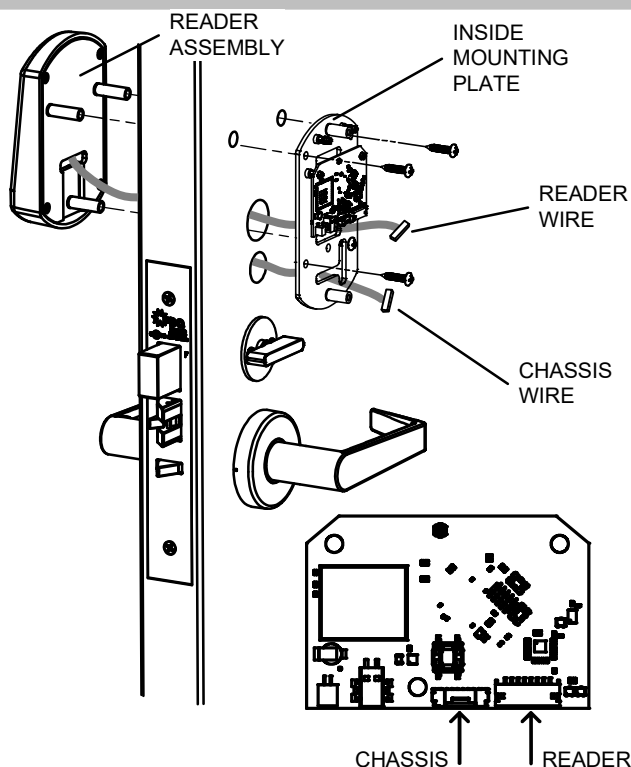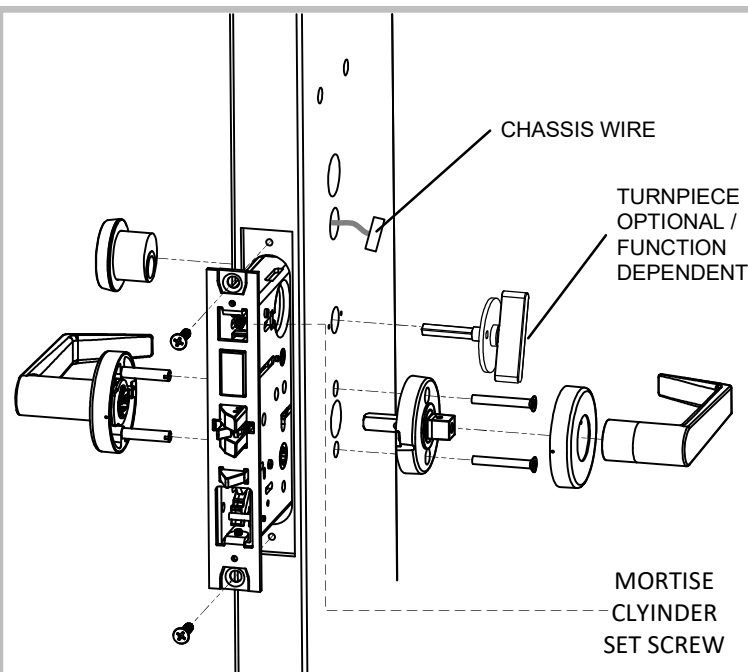

3. INSTALL READER AND INSIDE MOUNTING PLATE

- Install reader assembly and inside mounting plate – feed reader wire through hole in door and through slot under circuit board.
 - *Wire harness will land into wire pocket*
- Feed chassis wire through T slot in mounting plate.
- Secure with (3) M5 x 50 pan head screws (thru bolts).
- Make both wire connections after reader is secure. Push extra wire into door cavity.

MRS INSTALLATION INSTRUCTION


MORTISE LOCK



Phone: 866-874-3662 | www.pdqlocks.com


4. INSTALL BATTERY PACK

- Plug in battery wire to control board.
- Install battery pack over two studs on mounting plate.
- Snap battery pack onto retainers on mounting plate.

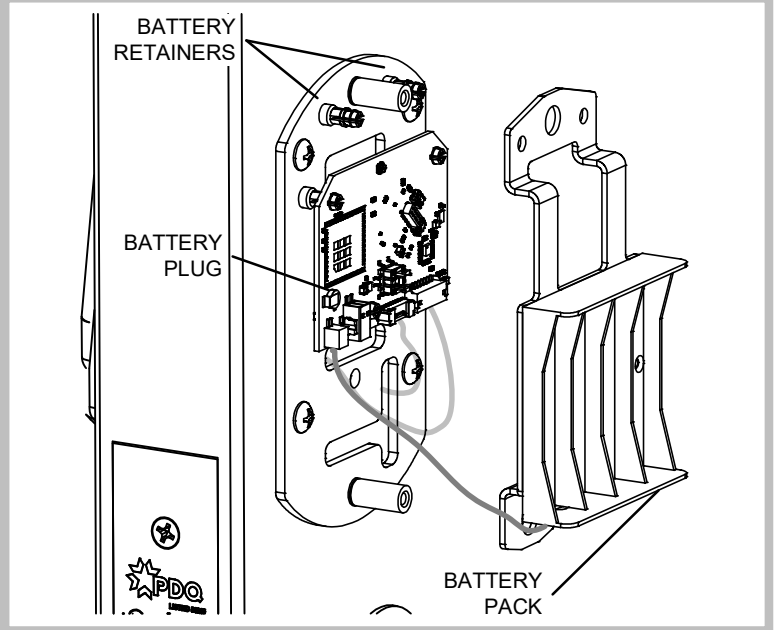

5. INSTALL BATTERIES AND BATTERY COVER

- Install batteries and battery cover with (2) pan head screws.

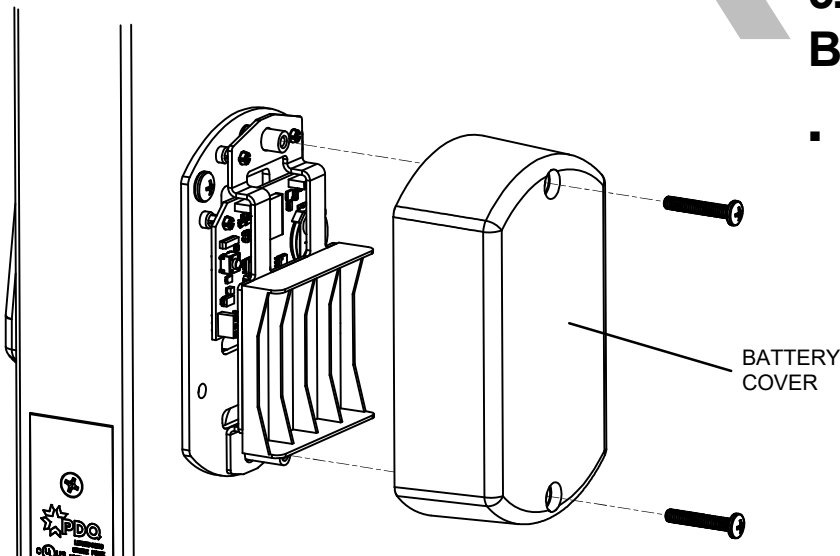

Scan QR Code to install Spirit App.

