

4200R MODEL - 2-1/4" BACKSET FROM MULLION

4200 SERIES DEVICES WITH 429036 STRIKE


TEMPLATE: 429310
REV. 0 4-13-18

TABLE "A" CHASSIS TO DOOR (IF APPLICABLE):	TABLE "B" END BRACKET TO DOOR/ STRIKE TO FRAME:
MACHINE SCREWS: USE #7 OR 13/64" [5.1] DRILL AND 1/4-20 TAP	MACHINE SCREWS: USE #25 OR 9/64" [3.6] DRILL AND 10-24 TAP
WOOD DOOR/FRAME SCREWS: USE 3/16" [4.8] DRILL	WOOD DOOR/FRAME SCREWS: USE 1/8" [3.5] DRILL
SEX NUTS: USE 3/8" [9.5] DRILL	SEX NUTS: USE 3/8" [9.5] DRILL (THROUGH HOLE)

NOTES:

1. VERIFY PRINTED TO SCALE.
2. DIMENSIONS IN INCHES [MM]
3. CAUTION: SEX NUTS MAY BE REQUIRED FOR UNREINFORCED DOORS OR COMPOSITE FIRE DOORS. CONSULT DOOR MANUFACTURER'S RECOMMENDATIONS.
4. SEX NUTS CONFLICT WITH SECTIONAL TRIM (PULL SIDE OF DOOR). IN CASES WHERE THROUGH BOLTING IS REQUIRED, USE ESCUTCHEON TRIM.
5. SEE TRIM TEMPLATE (IF APPLICABLE) RELATED MACHINING DETAILS.
6. DRILL 1-1/4" [31.8] CYLINDER HOLE FOR OPERATION BY RIM CYLINDER ONLY (NIGHT LATCH) WITHOUT TRIM.
7. DIMENSION "X" MEASURES 31-5/16" [795.3] UNCUT FOR 36" [914.4] DOORS. DIMENSION "X" MEASURES 43-5/16" [1100] UNCUT FOR 48" [1219.2] DOORS.
8. RECOMMENDED DIMENSION FROM FINISHED FLOOR MAY VARY BY APPLICATION, CODES OR BUILDING SPECIFICATIONS.
9. ALWAYS CHECK PDQ WEBSITE FOR MOST RECENT REVISION AT WWW.PDQLOCKS.COM

DRILL FOR ATTACHMENT OF STRIKE TO FRAME (2X) SEE TABLE "B"

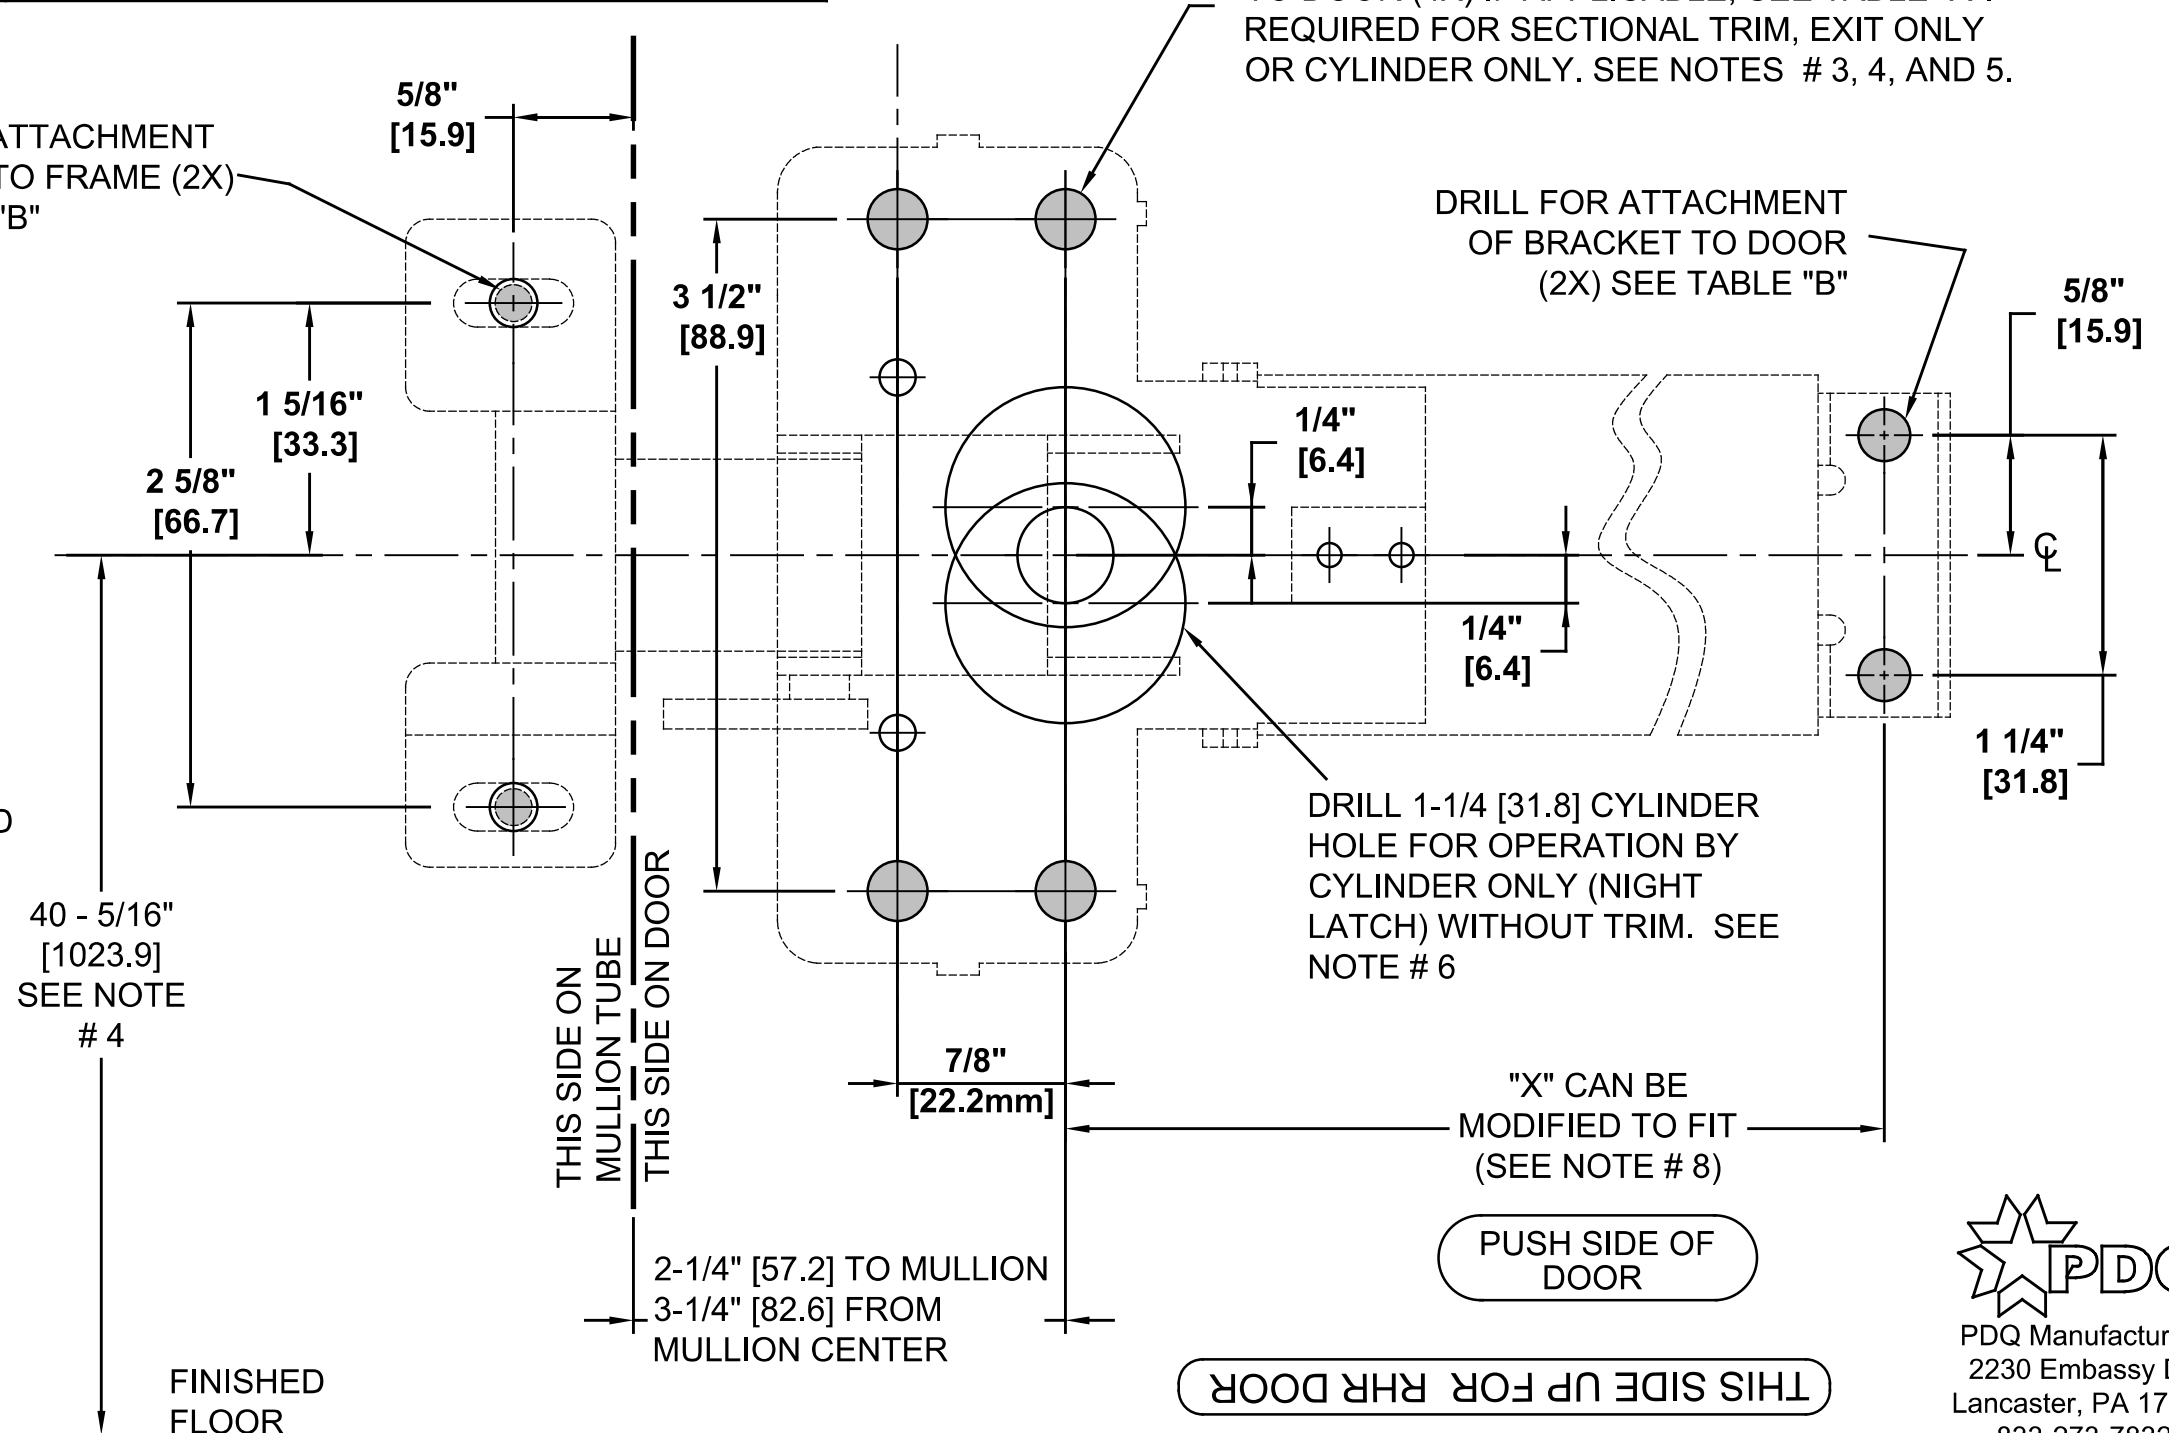

THIS SIDE UP FOR LHR DOOR

DRILL FOR ATTACHMENT OF DEVICE CHASSIS TO DOOR (4X) IF APPLICABLE, SEE TABLE "A". REQUIRED FOR SECTIONAL TRIM, EXIT ONLY OR CYLINDER ONLY. SEE NOTES # 3, 4, AND 5.

DRILL FOR ATTACHMENT OF BRACKET TO DOOR (2X) SEE TABLE "B"

DRILL 1-1/4 [31.8] CYLINDER HOLE FOR OPERATION BY CYLINDER ONLY (NIGHT LATCH) WITHOUT TRIM. SEE NOTE # 6

"X" CAN BE MODIFIED TO FIT (SEE NOTE # 8)

PUSH SIDE OF DOOR

THIS SIDE UP FOR RHR DOOR



PDQ Manufacturing
2230 Embassy Dr.
Lancaster, PA 17603
833-273-7832
833-2 PDQTECH
www.pdqlocks.com