

6300R - PANIC & 6300 RF - FIRE LABELED RIM EXIT DEVICES FOR WINDSTORM

TEMPLATE: 639316

REV. 2 12/27/22

6300 SERIES EXIT DEVICES USING SNB OR SURFACE MOUNT FASTENERS

DEVICE

MACHINE SCREWS:
USE #7 OR 13/64" DRILL AND 1/4-20 TAP

WOOD SCREWS:
USE 5/32" DRILL

SEX NUTS:
USE 3/8" DRILL PULL SIDE
USE 9/32" DRILL PUSH SIDE

STRIKE - ON FRAME


MACHINE SCREWS:
USE #25 OR 5/32" DRILL AND #10-24 TAP

STRIKE HOOK - ON DOOR

MACHINE SCREWS:
USE #7 OR 13/64" DRILL AND 1/4-20 TAP

NOTES:

1. VERIFY PRINTED TO SCALE
2. SEX NUTS MAY BE REQUIRED FOR UNREINFORCED DOORS OR COMPOSITE FIRE DOORS. CONSULT DOOR MANUFACTURER'S RECOMMENDATIONS
3. SEE TRIM TEMPLATE (IF APPLICABLE) FOR RELATED MACHINING DETAILS
4. DIMENSION "X" SIZED FOR DOOR. REFER TO DEVICE INSTRUCTIONS WHEN CUTTING DOWN FOR NARROWER OPENING
5. CHECK PDQ WEBSITE FOR MOST RECENT REVISION WWW.PDQLOCKS.COM
6. MINIMUM STILE WIDTH: 4 3/8"

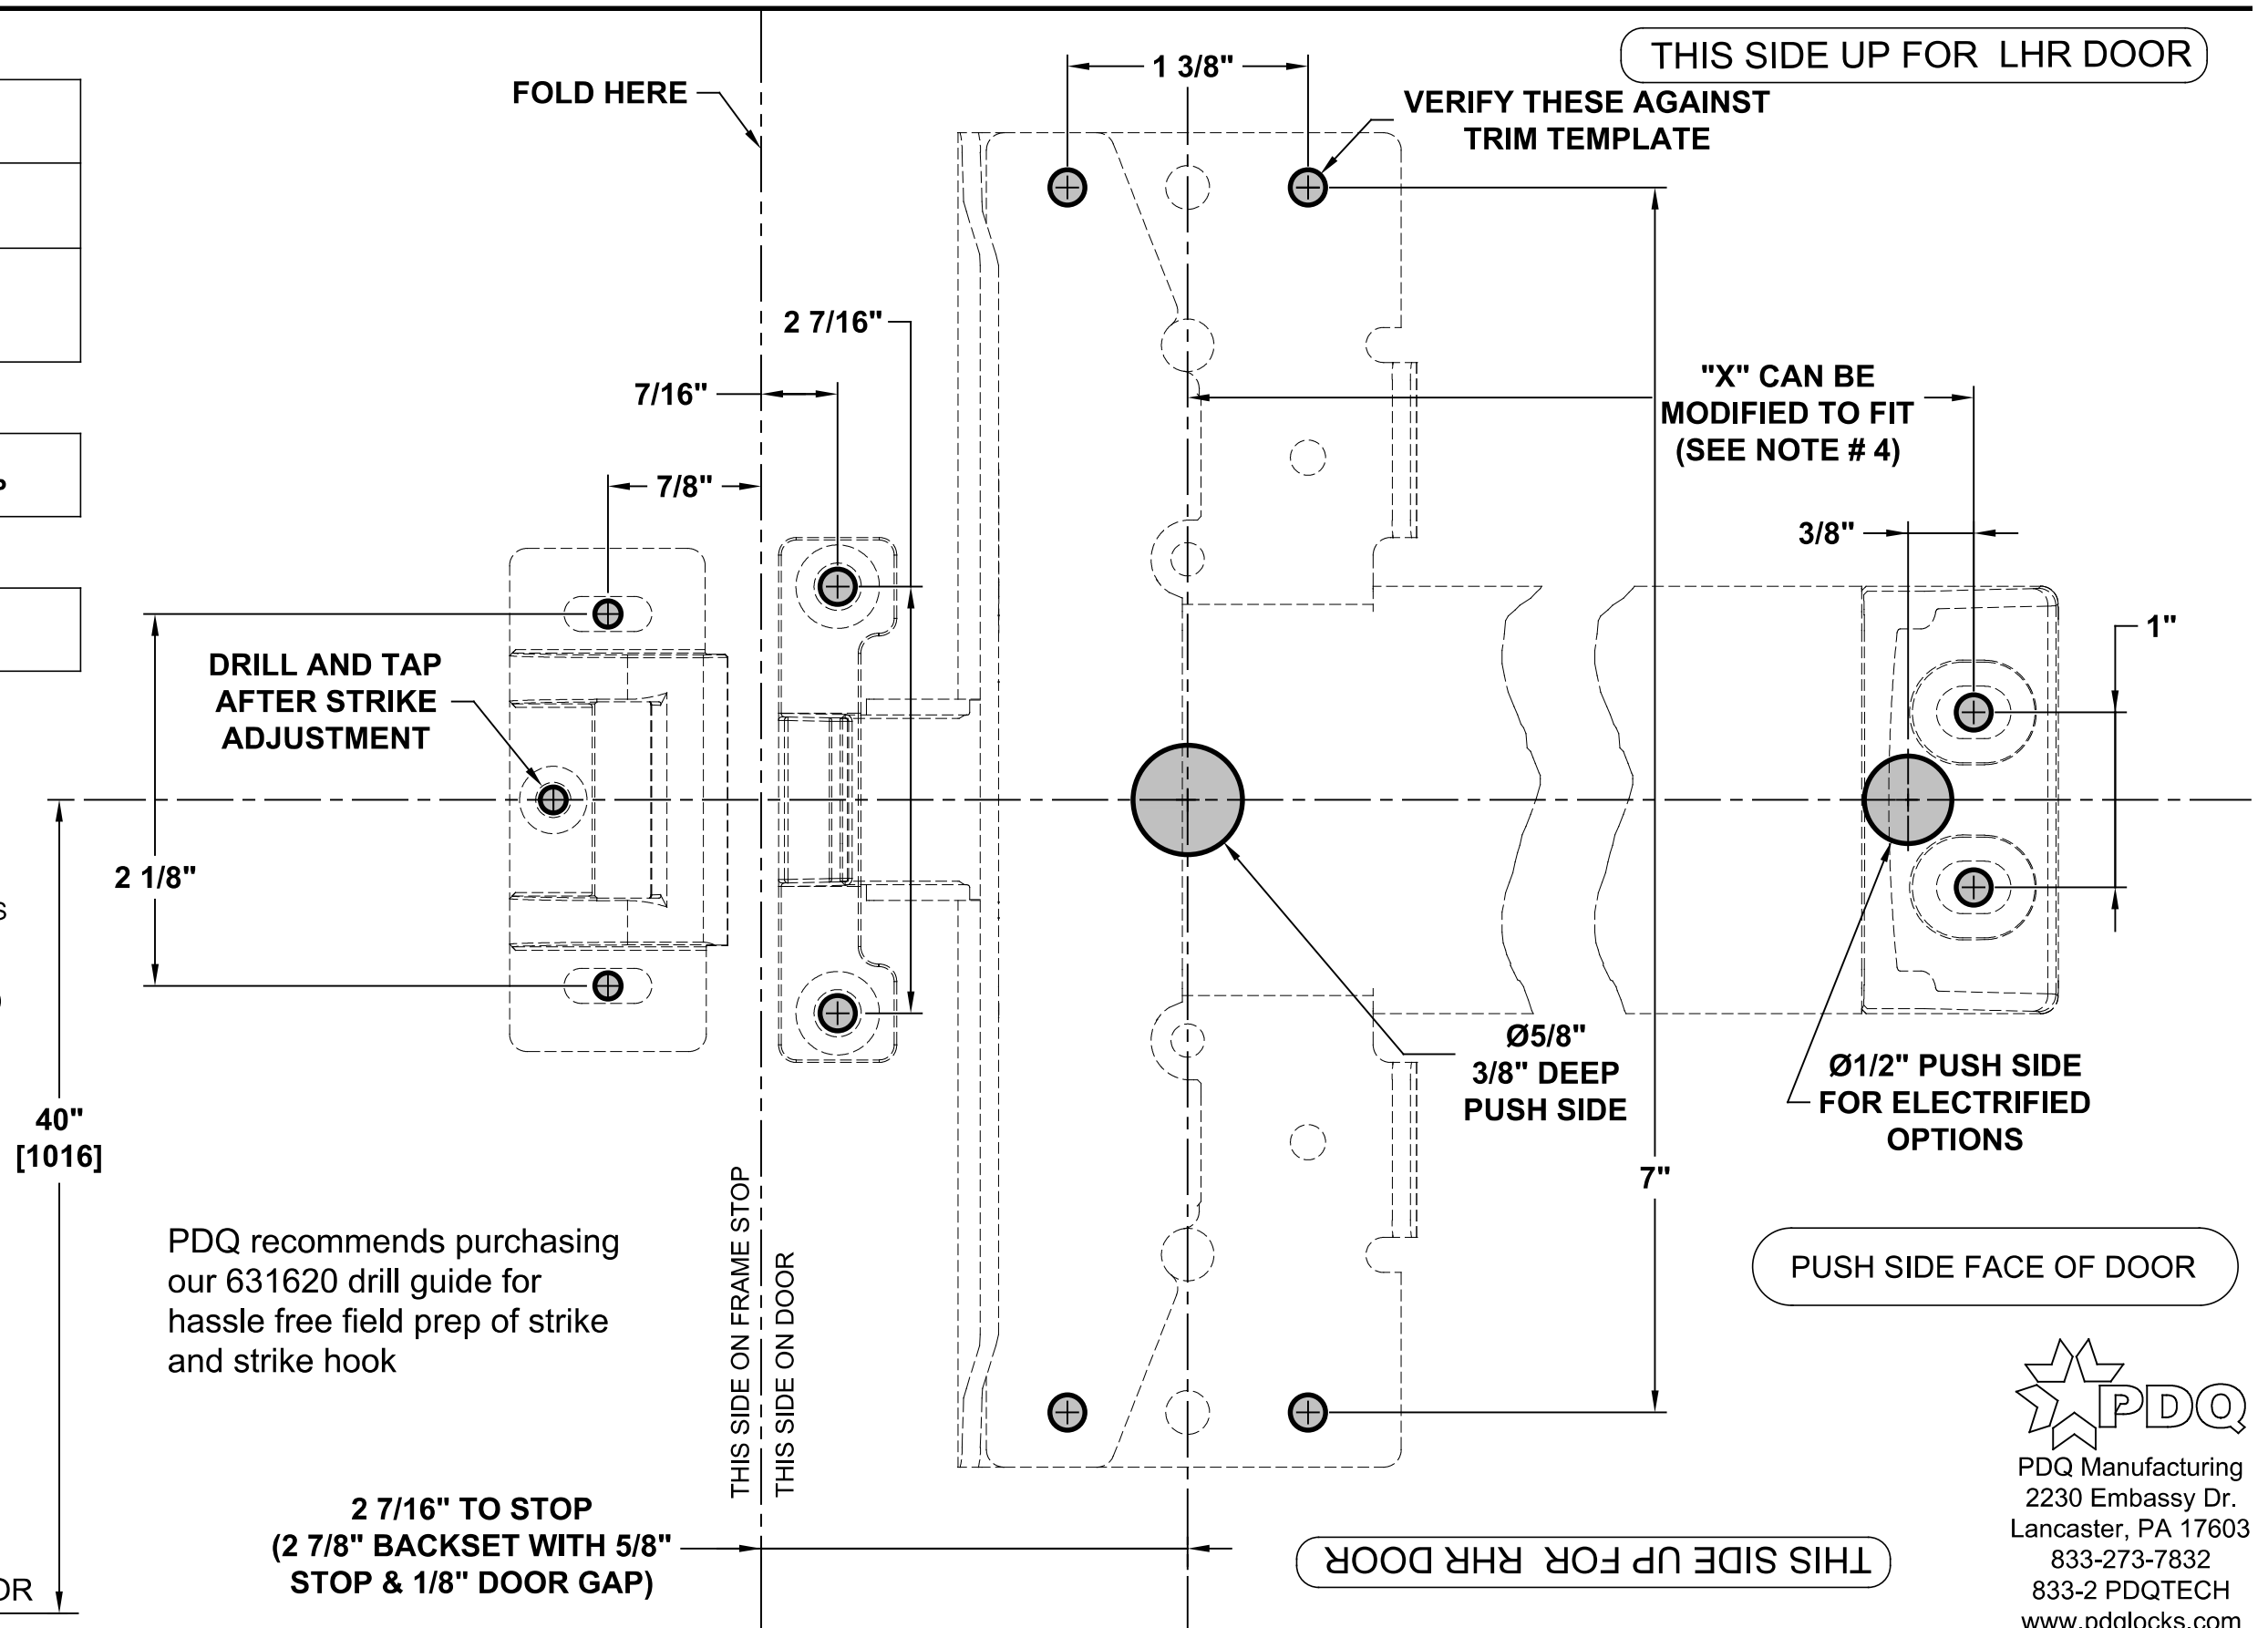

PDQ recommends purchasing our 631620 drill guide for hassle free field prep of strike and strike hook

PUSH SIDE FACE OF DOOR

THIS SIDE UP FOR RHR DOOR



PDQ Manufacturing
2230 Embassy Dr.
Lancaster, PA 17603
833-273-7832
833-2 PDQTECH
www.pdqlocks.com