


### GT Template

Mark Center of Door Thickness for Ø 1" Latch Hole

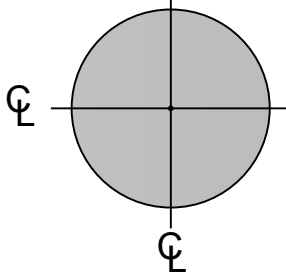

VA10035 REV1

Detach Here

High Bevel

Flat on Bevel

High Bevel

Low Bevel

Low Bevel


### Installation Template for Cylindrical Lever Locksets

Mark Center for Ø2 1/8" Hole


LATCH

2 3/4" Backset

**IMPORTANT**  
For Beveled Doors This Template Must be Adjusted Low/High for Correct Backset

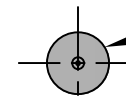

Mark Centers for 2 Thru-Bolt Mounting holes Ø5/16"

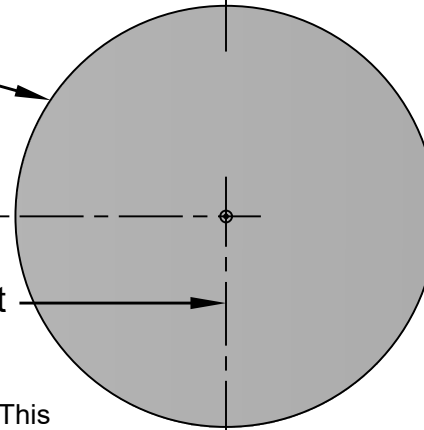

Lock is Preset by Factory for 1 3/4" Thick Doors. When installing on Doors Other Than 1 3/4" Thick the Chassis Must be Adjusted Using Guide below.

Align with inner edge of the inside hub. Use scale to set mounting plate for door thickness.

