
5100 DOOR CLOSER INSTRUCTION SHEET REGULAR ARM INSTALLATION - PULL SIDE - NON-HOLD OPEN AND HOLD OPEN APPLICATIONS

INSTRUCTION: 519351 REV. 2 09-06-19



5100 DOOR CLOSER INSTRUCTION SHEET

REGULAR ARM INSTALLATION - PULL SIDE - NON-HOLD OPEN AND HOLD OPEN APPLICATIONS

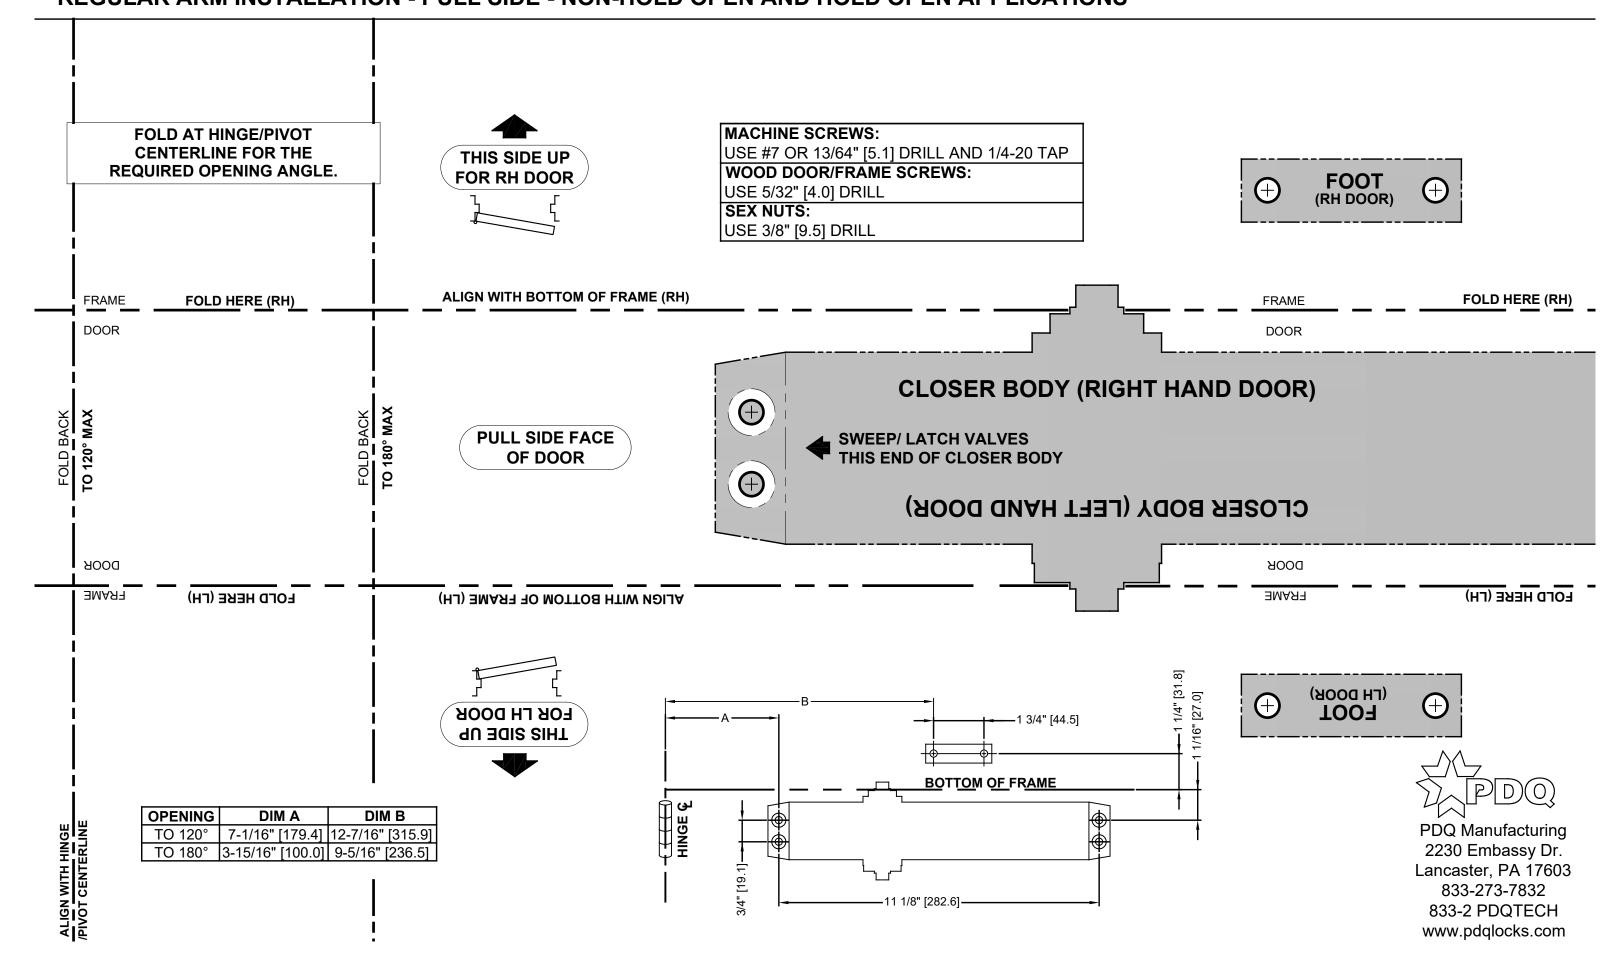

- 1. Confirm this sheet is correct for your product and application.
- 2. Read the complete instruction sheet before starting installation.
- 3. Incorrectly installed or adjusted door closers can cause personal injury or property damage.
- 4. To ensure safe operation, closers should be examined and serviced regularly.




- . See reverse side of this sheet to machine door & frame.
- 2. Dimensions based on 4-1/2" x 4-1/2" full mortise butt hinges with 5/8" stop and 1/8" door gap.
- 3. Confirm door & frame are properly reinforced.
- 4. Sex nuts required for un-reinforced or composite fire doors.
- 5. Do not install closer on the exterior (weather) side of building.



TOOLS REQUIRED:


- 1. Power drill
- 2. 10mm box/combo wrench
- 3. Phillips screw driver
- 4. #7 or 13/64" drill bit and 1/4-20 tap (machine screws)
- 5. Tap handle
- 6. 5/32" drill bit (wood screws)
- 7. 3/8" drill bit (sex nuts)
- 8. Center punch

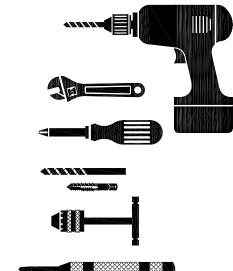




PREPARE DOOR AND FRAME:

- 1. Determine maximum opening angle.
- 2. Determine door hand (LH or RH).

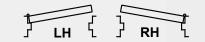

- 3. Align & attach full size template (see reverse side).
- 4. Mark door & frame with center punch.
- 5. Remove template before machining door & frame.

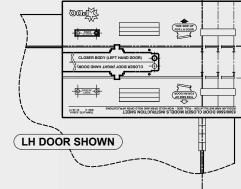





INSTALL CLOSER AND ARM:

 Attach closer body to door.
 Spring adjustment nut points away from hinge.



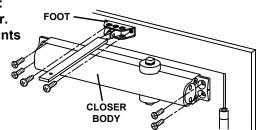


- 3. Secure main arm to closer spindle 90° to door/frame.
- Connect adjustment arm with foot assembly:
 Rotate main arm until adjustment arm is 90° to door & frame.
 Tighten arm screw or bolt .

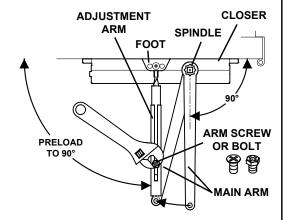



ADJUST SPRING POWER:

Use 4 mm hex key provided to adjust to size on chart.
 Clockwise (CW) turns increase spring power (+).
 Counter-clockwise (CCW) turns decrease spring power (-).

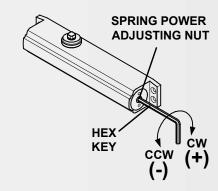

-				
		DOOR WIDTH		APPROX.
	SIZE	INTERIOR	EXTERIOR	360° TURNS
ĺ	1	32" [812.8]	28" [711.2]	-5 (CCW)
ı	2	36" [914.4]	32" [812.8]	-3 (CCW)
ı	3	42" [1066.8]	36" [914.4]	0 (PRESET)
ı	4	48" [1219.2]	42" [1066.8]	+3 (CW)
ı	5	54" [1371.6]	48" [1219.2]	+6 (CW)
	6	58" [1473.2]	54" [1371.6]	+9 (CW)




Closing time of 3-7 seconds is typical.

More time may be needed for ADA/BF access.

Clockwise (CW) = SLOWER.

Counter-clockwise (CCW) = FASTER.
DO NOT REMOVE VALVES

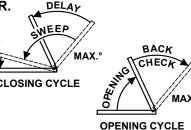


INSTRUCTION: 519351

09-06-19

REV. 2


- 1. Use hex key provided.
- 2. Adjust SWEEP (closing max.°- 10°).
- 3. Adjust LATCH (closing 10°-0°).
- 4. Adjust BACKCHECK resistance (opening 70°- max.°).
 DO NOT COMPLETELY CLOSE VALVE
- 5. Adjust (optional) DELAYED ACTION (closing max.°-70°); Provides additional hesitation for access (ADA/BF) through door.

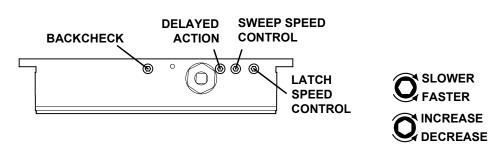



OPTIONAL HOLD OPEN ARM:

Important: DO NOT use arm as limiting stop, separate dead stop is required. Friction HO arm is not recommended for doors frequently operated in/out of hold open

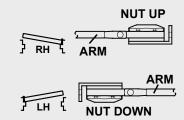


- 1. Install hold-open foot/nut.
 - Left Hand (LH) door = Nut points down. Right Hand (RH) door = Nut points up.
- 2. Loosen HO nut.
- 3. Open door several degrees before HO position.
- 4. Tighten nut.



INSTALL 5100 COVER:

- 1. Align cover with closer spindle. Slide insert into unused cutout.
- 2. Slide cover over closer until flush with door face.
- 3. Secure with screw provided.

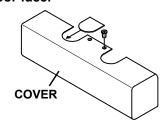



PDQ Manufacturing 2230 Embassy Dr. Lancaster, PA 17603 833-273-7832 833-2 PDQTECH www.pdqlocks.com